

KitchenAid®

GRAIN AND RICE COOKER


KGC3155

PRODUCT GUIDE




W11659456A

 PARTS AND FEATURES

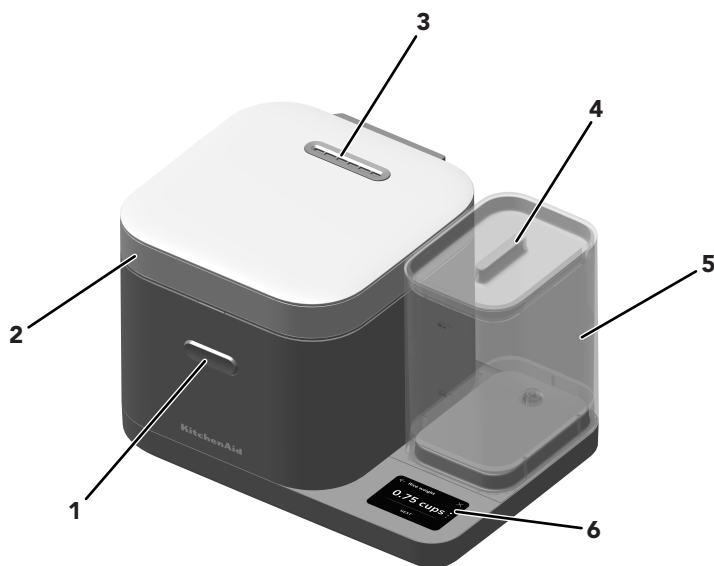


- | | |
|--------------------|------------------------|
| 1. Lid-Open Button | 4. Water Tank Lid |
| 2. Lid | 5. Water Tank |
| 3. Steam Vent | 6. Touchscreen Display |

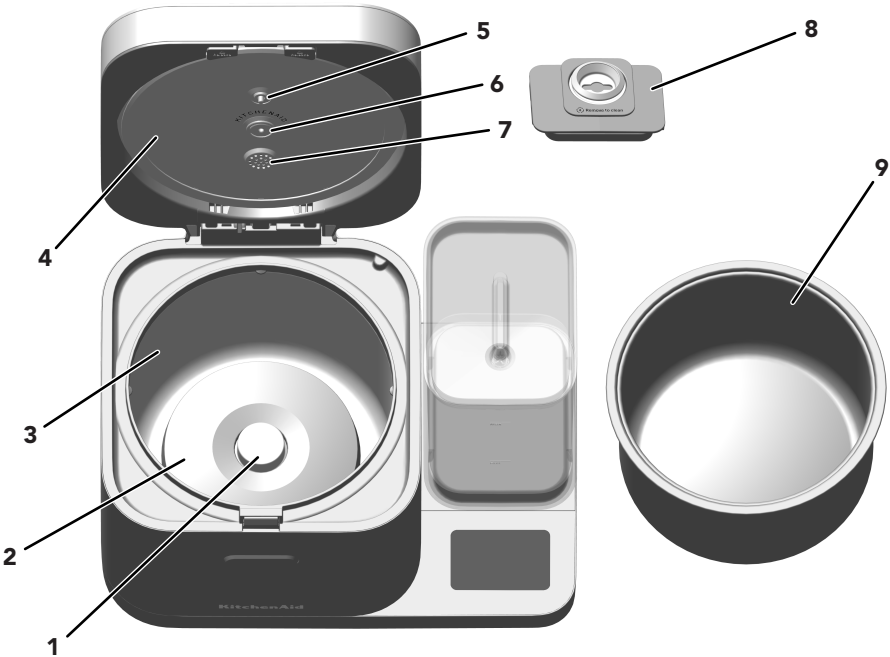 

- | | |
|--------------------------|----------------------------|
| 1. Heat Sensor | 6. Water Spout |
| 2. Heating Plate | 7. Inner Lid-Interior Vent |
| 3. Well | 8. Steam Collector |
| 4. Inner Lid (Removable) | 9. Ceramic Pot |
| 5. Boil-Over Sensor | |

 BOTTOM

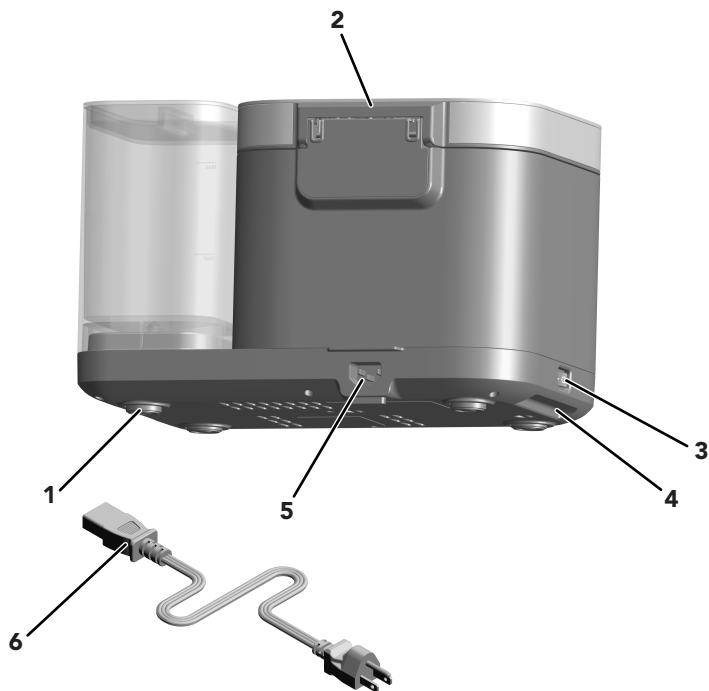

1. Rubber Feet

 
2. Lid Hinge/Hinge Cover

3. Power Switch
4. Pocket Handles

5. Power Cord Receptacle

6. Power Cord

ACCESSORY

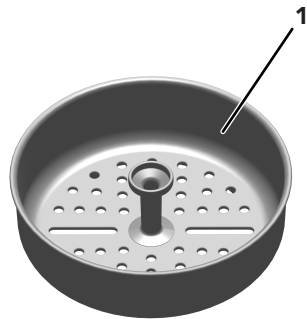

1. Steam Basket

FEATURES

Preset Cooking Cycles

21 presets to automate cooking a variety of grains, rice, and beans.

Custom Cooking Cycles

Custom cooking mode allows you to experiment with ingredients.

Delayed Cook

Programmable Delayed Cook lets you prepare meals on your schedule.

Steam

Steam cooking mode with a basket for veggies, eggs, fish, and more.

Soak

Presoak function lets you soak dry grains and beans before cooking.

Keep Warm

Keep Warm keeps cooked grains warm for up to 6 hours.

Clean

Non-stick Ceramic Pot and the steam cleaning cycle simplify cleanup.

PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.

2. Do not touch hot surfaces, including the Ceramic Pot, Lid, and Steam Vent area. Use potholders or oven mitts when handling the Ceramic Pot or Lid.
3. To protect against electrical shock do not immerse cord, plugs, or the Grain and Rice Cooker base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment.
7. The use of accessories/attachments not recommended or sold by KitchenAid may cause fire, electrical shock, or injury to persons.
8. Do not use the appliance outdoors.
9. Do not let Power Cord hang over edge of table or counter, or touch hot surfaces, including the top of the Grain and Rice Cooker.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing other hot liquids.
12. Always attach plug to appliance first, then plug the Power Cord into the wall outlet. To disconnect, turn the appliance off (O) then unplug from the wall outlet.
13. Do not use appliance for other than intended use.
14. Turn the appliance off (O), then unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the Power Cord.
15. Make sure the switch located on the left hand side of the Grain and Rice Cooker is in the on (I) position.

16. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. The appliance and cord should be out of reach of children.
17. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
18. Steaming coming from a Steam Vent can cause burns.
19. If the bowl is overfilled and the maximum capacity is bypassed, boiling water may be ejected.
20. To ensure safety while cooking, place your Grain and Rice Cooker on a flat, dry surface.
21. Cook only in the Ceramic Pot provided.
22. Do not fill Water Tank above the Max (maximum) fill line.
23. Never leave the appliance unattended while it is in operation.
24. Never use the appliance without the Ceramic Pot and the Inner Lid.
25. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
26. Do not exceed 1 oz (30 ml) of oil when cooking with the Grain and Rice Cooker.
27. Intended for countertop use only.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.