

Lil Luigi & Le Peppe User Manual

FAMILY, FRIENDS, & FOOD




400 S. Railroad St. Warren, IL 61087

815-745-1021

info@wppollc.com




www.wppollc.com

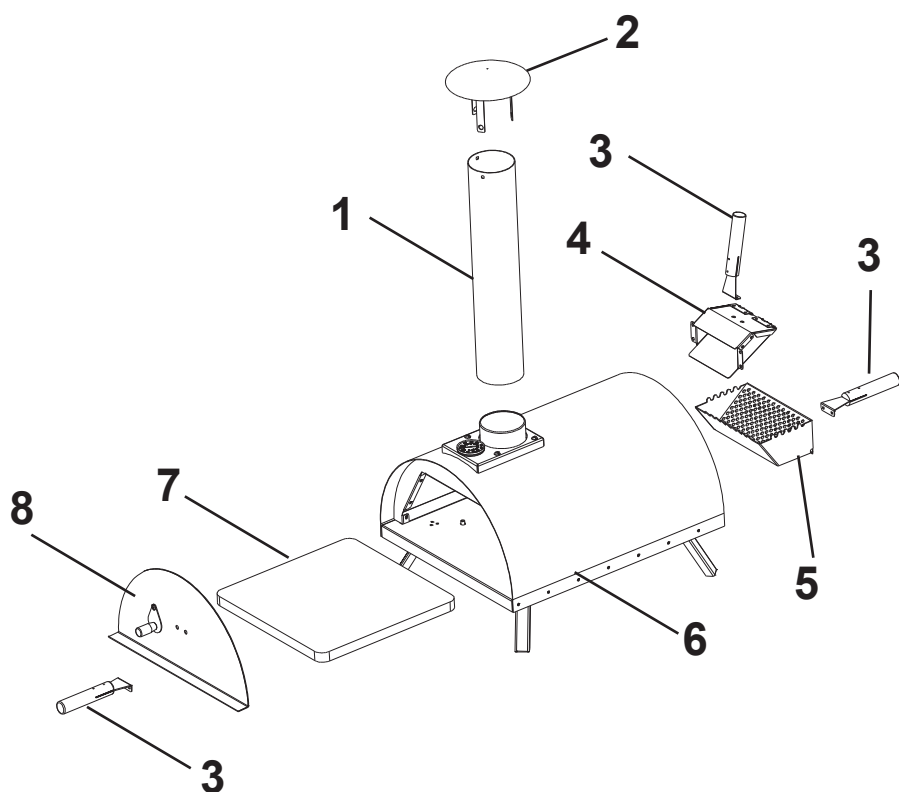



Ref	Part	Quantity	Ref	Part	Quantity
1	Chimney	1	6	Body	1
2	Chimney Cap	1	7	Baking Stone	1
3	Handle	3	8	Door	1
4	Hopper	1	A	M5 Bolt	13
5	Fire box	1			

Please note that the Le Peppe and Lil Luigi portable ovens are identical in use, care, and maintenance. The only difference between these two ovens is the exterior material and hinged door.


Step 1. Attach the handles to door, hopper and fire box with provided M5 screws.

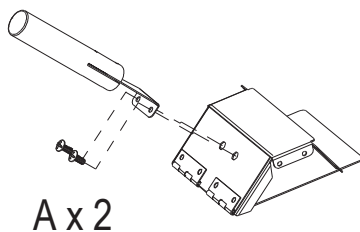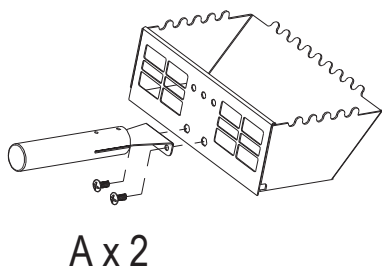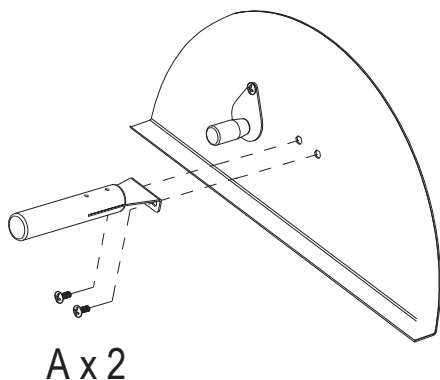


Step 2. Unfold the 4 legs at the bottom of the oven body,
Attach the hopper and fire box to the back of the body.

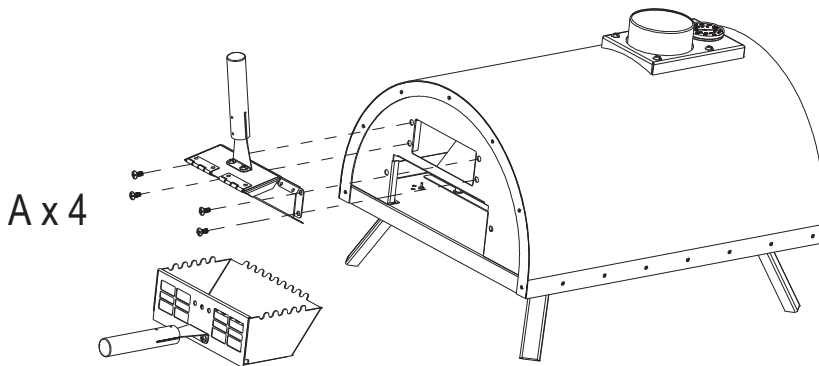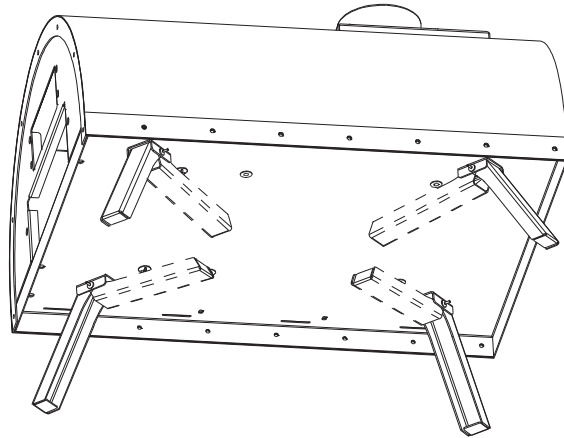

Step 3. Attach the chimney cap onto the top of the chimney pipe.
Once attached, slide the chimney onto the oven.

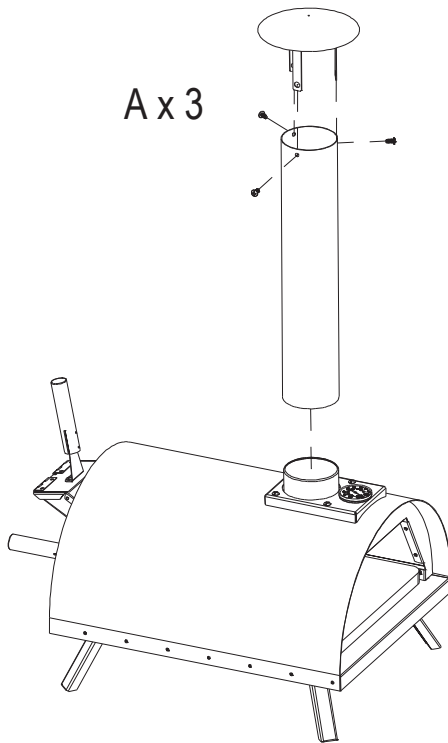

Step 4. Slide the baking stone into the body.

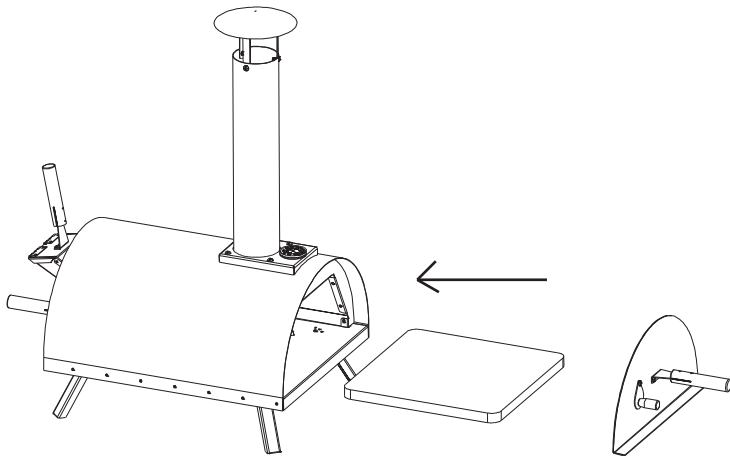

Assembly is finished! Enjoy cooking in your WPPO wood-fired oven.