



PB410FP

CIRCULAR FIREPIT/GRILL

IMPORTANT, READ CAREFULLY, RETAIN
FOR FUTURE REFERENCE. MANUAL MUST
BE READ BEFORE OPERATING!

FOYER/GRIL CIRCULAIRE

IMPORTANT, PRENEZ CONNAISSANCE DE
CE DOCUMENT ET CONSERVEZ-LE POUR
RÉFÉRENCE ULTÉRIEURE VOUS DEVEZ LIRE
CE GUIDE AVANT D'UTILISER LE FOYER!

BRASERO/PARRILLA CIRCULAR

IMPORTANTE, LEER DETENIDAMENTE,
CONSERVAR PARA REFERENCIA FUTURA.
LEA EL MANUAL ANTES DEL USO!

MODEL / MODÈLE / MODELO : PB410FP
PART / PIÈCE / PARTE : 10730, 10890

**FOR OUTDOOR AND HOUSEHOLD USE ONLY.
NOT FOR COMMERCIAL USE. FUEL NOT INCLUDED.**
**POUR UN USAGE EXTÉRIEUR ET DOMESTIQUE SEULEMENT.
PAS POUR USAGE COMMERCIAL. CARBURANT NON INCLUS.**

**SÓLO PARA USO DOMÉSTICO Y EN EXTERIORES.
NO PARA USO COMERCIAL. COMBUSTIBLE NO INCLUIDO.**



ASSEMBLY AND OPERATION ASSEMBLAGE ET FONCTIONNEMENT | MONTAJE Y OPERACIÓN

WARNING: PLEASE READ THE ENTIRE MANUAL BEFORE INSTALLATION AND USE. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN PROPERTY DAMAGE, BODILY INJURY OR EVEN DEATH. CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION REQUIREMENTS IN YOUR AREA.

AVERTISSEMENT: VEUILLEZ LIRE L'INTEGRALITÉ DU MANUEL AVANT L'INSTALLATION ET L'UTILISATION. LE NON-RESPECT DE CES INSTRUCTIONS PEUT ENTRAINER DES DOMMAGES AUX BIENS, DES BLESSURES OU MÊME LA MORT. COMMUNIQUEZ AVEC LES AUTORITÉS LOCALES EN MATIÈRE D'INCENDIE ET DE BÂTIMENT CONCERNANT LES RESTRICTIONS ET LES EXIGENCES D'INSTALLATION DANS VOTRE RÉGION.

ADVERTENCIA: LEA EL MANUAL COMPLETO ANTES DE INSTALAR Y UTILIZAR. INCUMPLIR ESTAS INSTRUCCIONES PODRÍA CAUSAR DAÑOS MATERIALES, LESIONES CORPORALES, E INCLUSO LA MUERTE. CONSULTE A SUS FUNCIONARIOS LOCALES DE CONSTRUCCIÓN Y CONTROL DE INCENDIOS PARA INFORMARSE SOBRE LAS RESTRICCIONES Y LOS REQUISITOS DE INSPECCIÓN DE INSTALACIONES EN SU REGIÓN.

SAFETY INFORMATION

MAJOR CAUSES OF UNCONTROLLED FIRES ARE A RESULT OF POOR CARE AND A FAILURE TO MAINTAIN REQUIRED CLEARANCE TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS PRODUCT BE USED ONLY IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS.

Please read and understand this entire manual before attempting to assemble and operate the product. This will ensure you receive the most enjoyable and trouble-free use of your new firepit. We also advise you retain this manual for future reference.

DANGERS AND WARNINGS

You must contact your local home association, building or fire officials, or authority having jurisdiction, to obtain the necessary permits, mission or information on any installation restrictions, such as any firepit being installed on a combustible surface, inspection requirements or even ability to use, in your area.

1. A minimum clearance of 2.4m (96 inches) from combustible constructions to the sides of the firepit, and 2.4m (96 inches) from the back of the firepit to combustible constructions must be maintained. **Do not position on combustible floors, or floors protected with combustible surfaces unless proper permits and permissions are obtained by authorities having jurisdiction.** Do not use in vehicles, tents, indoors or in an enclosed, unventilated area. Do not place under overhead combustible ceiling, overhang, or canopy of trees. Keep your firepit in an area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

Do not leave fire unattended. Use of an all-class (class ABC) approved fire extinguisher is valuable to keep on site. If an uncontrolled fire does occur, call the Fire Department.

2. This firepit is designed for burning wood, charcoal or fire logs only.

Do not use spirit, petrol, gasoline, lighter-fluid or kerosene for lighting or refreshing a fire in your firepit. Keep all such liquids well away from the appliance when in use.

3. Ensure that the mesh cover is secured over the fire bowl while in use. During use, the handle on the mesh cover can reach extreme temperatures that can cause serious injury. It is recommended to use the poker, heat-resistant barbecue mitts or gloves when using the firepit. Do not use accessories not specified for use with this unit. Do not put a cover or anything flammable on the unit when in use. Ensure the firepit and mesh cover have cooled before placing a cover over the firepit.

4. Do not transport your firepit while in use or while the firepit is hot. Ensure the fire is completely out and that the firepit is completely cool to the touch before moving.
5. Parts of the firepit may be very hot and serious injury may occur. Do not touch surface while in use. Keep young children and pets away while in use.

This unit is not recommended for children, persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are under direct supervision or instruction by a person responsible for their safety.

6. Product may have sharp edges or points. Contact may result in injury. Handle with care.

DISPOSAL OF ASHES

Ashes should be placed in a metal container with a tight-fitting lid. The closed container of ashes should be placed on a non-combustible floor or on the ground, well away from all combustible materials, pending final disposal. When ashes are disposed by burial in soil, or otherwise locally dispersed, they should be retained in a closed container until all cinders have thoroughly cooled.

CARBON MONOXIDE ("THE SILENT KILLER")

Carbon monoxide is a colorless, odorless, tasteless gas produced by burning gas, wood, propane, charcoal or other fuel. Carbon monoxide reduces the blood's ability to carry oxygen. Low blood oxygen levels can result in headaches, dizziness, weakness, nausea, vomiting, sleepiness, confusion, loss of consciousness or death. Follow these guidelines to prevent this colorless, odorless gas from poisoning you, your family, or others:

- See a doctor if you or others develop cold or flu-like symptoms while cooking or in the vicinity of the unit. Carbon monoxide poisoning, which can easily be mistaken for a cold or flu, is often detected too late.
- Alcohol consumption and drug use increase the effects of carbon monoxide poisoning.

Carbon monoxide is especially toxic to mother and child during pregnancy, infants, the elderly, smokers, and people with blood or circulatory system problems, such as anemia, or heart disease.

TABLE OF CONTENTS

Safety Information	2	Instructions For Use	
Parts & Specs.....	5	First Use – Burn-Off.....	10
Assembly Preparation.....	6	Lighting Instructions	10
Assembly Instructions		Tending The Fire.....	10
Mounting The Legs	6	Extinguishing The Fire.....	10
Assembling The Base Ring.....	6	Care & Maintenance	11
Mounting The Base Ring.....	7	Replacement Parts.....	12
Installing The Table Panels	7	Warranty	
Assembling The Cooking Grid.....	8	Conditions	13
Assembling The Charcoal Pan	8	Exceptions	13
Assembling The Lid.....	8	Ordering Replacement Parts.....	14
Securing The Cooking Grid	9	Contact Customer Care.....	14
Installing The Fire Bowl Components	9	Warranty Service	14



COPYRIGHT NOTICE

Copyright 2024. All right reserved. No part of this manual may be copied, transmitted, transcribed, stored in a retrieval system, in any form or by any means without expressed written permission of,

Dansons

8877 North Gainey Center Drive, Scottsdale, AZ, USA 85258
www.pitboss-grills.com

 
Customer Care

USA: (480) 923-9630
 Canada (Toll-Free): 1-877-942-2246

PARTS & SPECS

Part#	Description
1	Swing Handle (x1)
2	Lid Ring (x1)
3	Lift Handle (x1)
4	Cooking Grid (x1)
5	Lid (x1)
6	Charcoal Pan Handle (x2)
7	Charcoal Pan (x1)
8	Table Panel (x3)
9	Table Panel with Hole (x1)
10	Table Support Bracket (x4)
11	Fire Bowl (x1)
12	Anchor Pin (x1)
13	Base Ring (x4)
14	Leg (x4)
A	Screw (x48)
B	Nut (x17)
C	Screw (x4)
D	Wrench (x1)

NOTE: Due to ongoing product development, parts are subject to change without notice. Contact Customer Care if parts are missing when assembling the unit.

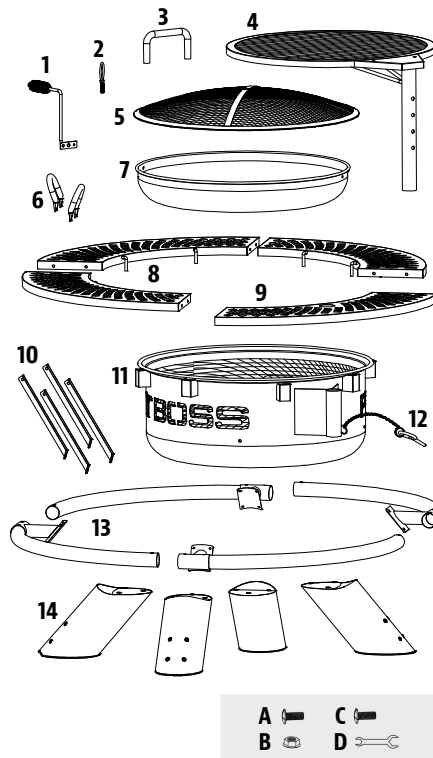

ENGLISH

MODEL	ASSEMBLED (WxDxH)	WEIGHT	COOKING AREA
PB PB410FP	1,150MM X 1,150MM X 874MM / 45.2 IN. X 45.2 IN. X 34.4 IN.	31.0 KG / 68.3 LB	3,116.1 CM ² / 483.0 IN ²

ASSEMBLY PREPARATION

Parts are located throughout the shipping carton, including inside the fire bowl. Unpack the unit and parts by removing all packaging materials. Before assembly, review all parts and reference the parts list. If any part is missing or damaged, do not attempt to assemble. Shipping damage is not covered under warranty. Contact your dealer or Pit Boss® Customer Care for parts.

www.pitboss-grills.com

USA: (480) 923-9630 | Canada: 1-877-942-2246

Tool required for assembly: Phillips screwdriver (not included) and wrench (included).

ASSEMBLY INSTRUCTIONS

1. MOUNTING THE LEGS

 
Parts Required:

- 1 x Fire Bowl (#11)
- 4 x Leg (#14)
- 12 x Screw (#A)

Installation:

- Place a piece of cardboard on the floor to prevent scratching the unit and parts during assembly.
- Mount a Leg to the Fire Bowl using three screws through the pre-drilled holes. Install screws from the inside of Fire Bowl. Repeat the same procedure for other Legs.

IMPORTANT: Do not tighten the screws until the base ring is mounted on the legs, then tighten all the screws.

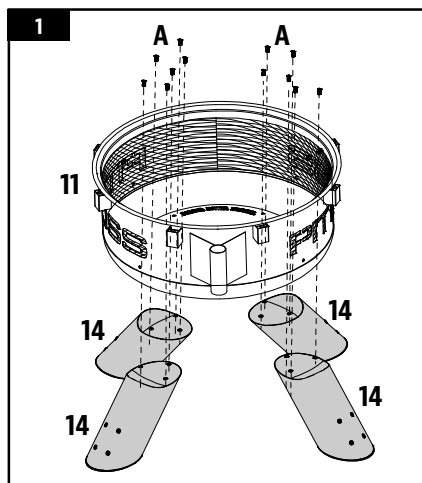

2. ASSEMBLING THE BASE RING

 
Parts Required:

- 4 x Base Ring (#13)
- 4 x Screw (#A)

Installation:

- Insert one Base Ring into another and fasten them with screw. Repeat the same procedure to install the other two Base Rings.

IMPORTANT: Ensure all inside brackets are facing the same direction.

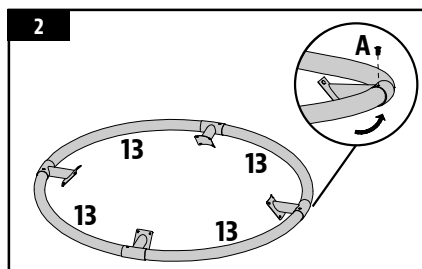


3. MOUNTING THE BASE RING

Parts Required:

16 x Screw (#A)

Installation:

 - Place the assembled Base Ring overtop of the Fire Bowl and align on legs, as shown in illustration.
- Mount each Base Ring bracket to each aligning Leg using four screws.

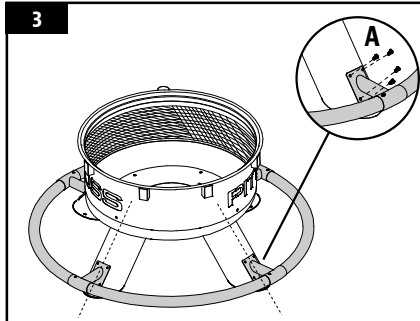

4. INSTALLING THE TABLE PANELS

Parts Required:

 
 
3 x Table Panel (#8)
1 x Table Panel with Hole (#9)
4 x Table Support Bracket (#10)
12 x Screw (#A)
12 x Nut (#B)

Installation:

- First, locate the post tubing on the side of the Fire Bowl. Install the Table Panel with Hole onto this side of the Fire Bowl by inserting the two pins into the fixed pin brackets. Install the other Table Panels around the Fire Bowl in the same manner. Note illustration 4A.

IMPORTANT: The Table Panel with hole must align with post tubing in order to install Cooking Grid in later steps.

- Secure the Table Panels to the Fire Bowl with a Table Support Bracket: mount the bottom to the Fire Bowl using a screw and nut (fastened from the inside), mount the top to the Table Panels with a screw and nut (hole furthest from Fire Bowl). Repeat for all sides. Complete the installation using a screw and nut to secure the Table Panels together (hole closest to Fire Bowl). Note illustration 4B.

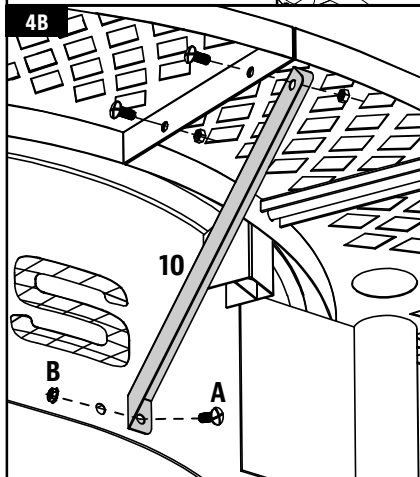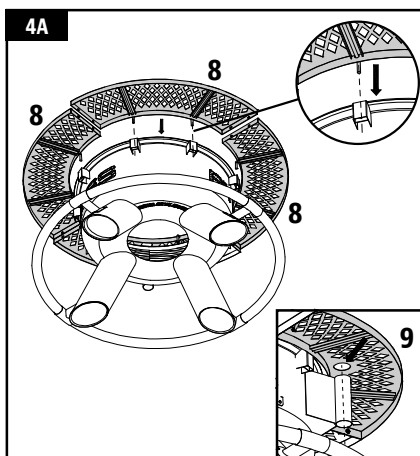



5. ASSEMBLING THE COOKING GRID

Parts Required:

- 1 x Swing Handle (#1)
- 1 x Lift Handle (#3)
- 1 x Cooking Grid (#4)
- 4 x Screw (#C)

Installation:

  - Mount the Swing Handle to the side of the Cooking Grid using two screws. Note illustration 5A.
- Mount the Lift Handle to the top of the Cooking Grid using two screws. Note illustration 5B.

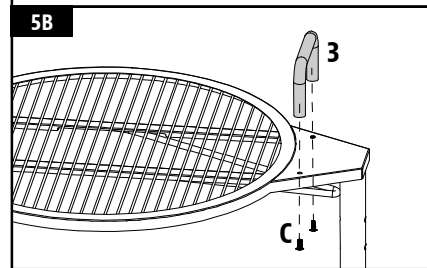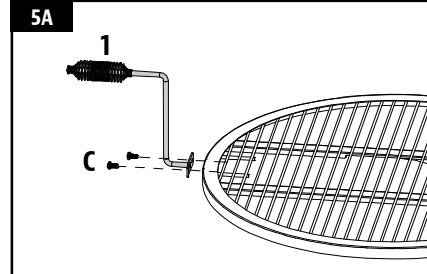


6. ASSEMBLING THE CHARCOAL PAN

Parts Required:

- 2 x Charcoal Pan Handle (#6)
- 1 x Charcoal Pan (#7)
- 4 x Screw (#A)
- 4 x Nut (#B)

Installation:

 - Place a Charcoal Pan Handle to one inside edge of the Charcoal Pan and using two screws and nuts. Repeat same procedure for opposing side.

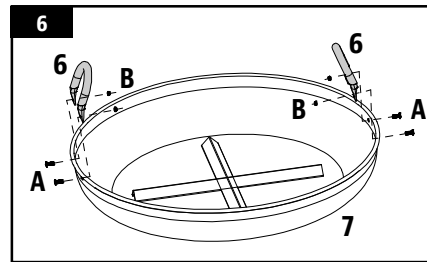


7. ASSEMBLING THE LID

Parts Required:

- 1 x Lid Ring (#2)
- 1 x Lid (#5)
- 1 x Nut (#B)

Installation:

 - Insert the Lid Ring into the top of the Lid and secure using one nut.

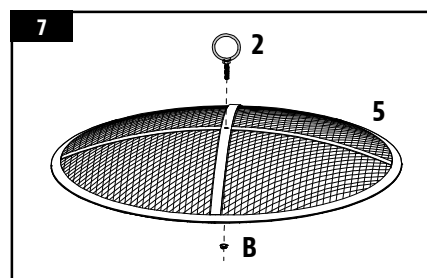


8. SECURING THE COOKING GRID

Parts Required:

1 x Anchor Pin (#12)

Installation:

 - Insert the Cooking Grid post into the Table Panel with Hole. Note 8A.
- Secure the Cooking Grid at the desired height using the Anchor Pin. Note 8B.

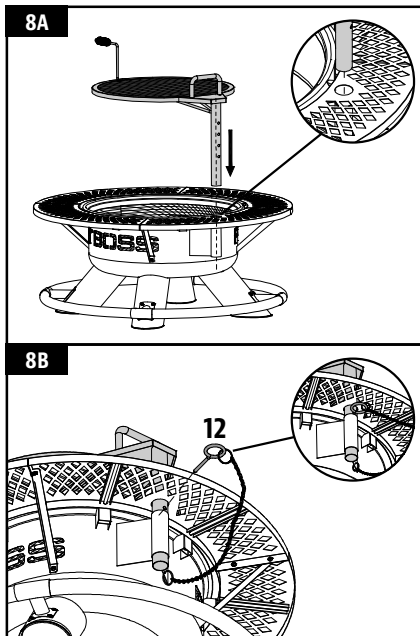

9. INSTALLING THE FIRE BOWL COMPONENTS

Parts Required:

1 x Lid (#5)

1 x Charcoal Pan (#7)

 
Installation:

- Insert the Charcoal Pan into the Fire Bowl. Place the Lid on the top of the Fire Bowl. It will rest on the edges. Note illustration 9A.

NOTE: To maintain the searing and grilling performance of your Cooking Grids, regular care and maintenance is required.

- The unit is completely assembled. Use the Lift Handle to raise and lower the Cooking Grid. Use the Swing Handle to move the Cooking Grid side to side. Note 9B.

CAUTION: Handles can become hot during use. If adjustment is needed, use a heat resistant glove or mitt.

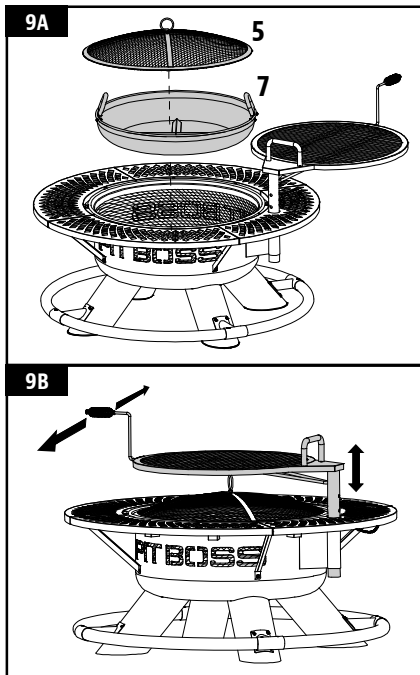

INSTRUCTIONS FOR USE

FIRST USE – BURN-OFF

Before cooking on your firepit for the first time, it is important to complete a burn-off. Light the firepit and let it burn for for 20 to 30 minutes to rid it of any foreign matter.

LIGHTING INSTRUCTIONS

1. Swing the Cooking Grid to the side. Remove the Lid and set aside.

NOTE: When cooking in the Firepit, remove the Lid of the Charcoal Pan to prevent grease build-up.

2. Place one lighter cube (or solid firestarter) and one handful of small amount of kindling at the bottom of the Charcoal Pan.
3. Place firewood on top of kindling or Firestarter.
4. Use either a long handled lighter or match to light kindling or firestarter.

WARNING: Do not use gasoline, white spirit, lighter fluid, alcohol or other similar chemicals for lighting or relighting.

TENDING THE FIRE

1. Using a heat resistant glove or mitt, swing the Cooking Grid to the side. Remove the Lid and set it aside.
2. Observe the fire in the Fire Bowl. If the heat is low and more fire is desired, place additional firewood carefully and directly on the hot coals.

WARNING: Hot embers may result in injury if disturbed too quickly. Careful to not disturb the ash in the Charcoal Pan.

EXTINGUISHING THE FIRE

1. To extinguish the fire, allow all coals to burn out.

WARNING: Do not use water to put out the Firepit. This can be harmful to the structure of the firepit and heavily decrease its lifetime.

CARE & MAINTENANCE

Any Pit Boss® unit will give you many years of use with minimum cleaning. Follow these cleaning and maintenance tips to service your firepit and extend its lifetime:

1. *FIRE BOWL COMPONENTS*

- It is recommended to clean your Charcoal Pan after every few uses. This will avoid any hard build-up of debris or ash in the bottom. When cool and all coals have burned completely, dispose of ashes by removing and dumping the Charcoal Pan.
- Using a grill cleaning brush, remove any food or build-up from the Cooking Grids. Best practice is to do this while they are still warm from a previous burn.
- With regular use, the bottom of the Fire Bowl will discolor. This is a normal occurrence and should not be considered a defect of the product.

2. *EXTERIOR COMPONENTS*

- Wipe the Table Panels down after each use. Use warm soapy water to cut the grease. Do not use oven cleaner, abrasive cleansers or abrasive cleaning pads on the outside surfaces. Ensure the firepit is completely cool prior to cleaning.
- A cover is your best protection against weather and outside pollutants. When not in use or for longterm storage, keep the unit under a cover in a garage or shed.


CLEANING TIME TABLE (NORMAL USE)

ITEM	CLEANING FREQUENCY	CLEANING METHOD
Cooking Grids	Every 2-3 Grill Sessions	Burn Off Excess, Wire Brush
Table Panels	As Needed	Scrub Pad & Soapy Water
Fire Bowl	After Each Use	Scoop Out, Shop-Vac Excess Debris
Charcoal Pan	After Each Use	Scoop Out, Shop-Vac Excess Debris

REPLACEMENT PARTS

Part#	Description
1	Swing Handle (x1)
2	Lid Ring (x1)
3	Lift Handle (x1)
4	Cooking Grid (x1)
5	Lid (x1)
6	Charcoal Pan Handle (x2)
7	Charcoal Pan (x1)
8	Table Panel (x3)
9	Table Panel with Hole (x1)
10	Table Support Bracket (x4)
11	Fire Bowl (x1)
12	Anchor Pin (x1)
13	Base Ring (x4)
14	Leg (x4)
A	Screw (x48)
B	Nut (x17)
C	Screw (x4)
D	Wrench (x1)

 NOTE: Due to ongoing product development, parts are subject to change without notice.

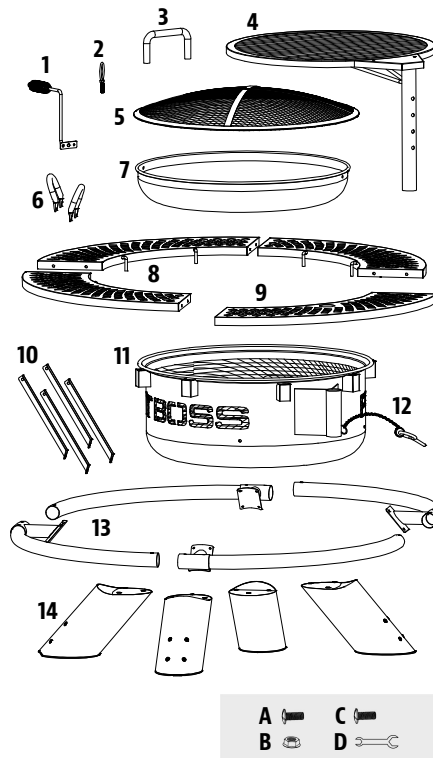

WARRANTY

CONDITIONS

All firepits by Pit Boss®, manufactured by Dansons, carry a limited warranty from the date of sale by the original owner. The warranty coverage begins on the original date of purchase and proof of date of purchase, or copy of original bill of sale, is required to validate the warranty. Customers will be subject to parts, shipping, and handling fees if unable to provide proof of the purchase or after the warranty has expired.

Dansons carries a one (1) year warranty against defects and workmanship on all parts. Dansons warrants that all part(s) are free of defects in material and workmanship, for the length of use and ownership of the original purchaser. Warranty does not cover damage from wear and tear, such as scratches, dents, dings, chips or minor cosmetic cracks. These aesthetic changes of the grill do not affect its performance. Repair or replacement of any part does not extend past the limited warranty beyond the one (1) year from date of purchase.

During the term of the warranty, Dansons' obligation shall be limited to furnishing a replacement for defective and/or failed components. As long as it is within the warranty period, Dansons' will not charge for repair or replacement for parts returned, freight prepaid, if the part(s) are found by Dansons' to be defective upon examination. Dansons' shall not be liable for transportation charges, labor costs, or export duties. Except as provided in these conditions of warranty, repair or replacement of parts in the manner and for the period of time mentioned heretofore shall constitute the fulfillment of all direct and derivate liabilities and obligations from Dansons to you.

Dansons takes every precaution to utilize materials that resist rust. Even with these safeguards, the protective coatings can be compromised by various substances and conditions beyond Dansons' control. High temperatures, excessive humidity, chlorine, industrial fumes, fertilizers, lawn pesticides and salt are some of the substances that can affect metal coatings. For these reasons, the warranty does not cover rust or oxidization, unless there is loss of structural integrity on the grill component. Should any of the above occur, kindly refer to the care and maintenance section to maintain the finish of your grill and prolong its lifespan. Dansons recommends the use of a full length protective grill cover when the grill is not in use.

This warranty is based on normal domestic use and service of the grill and neither limited warranty coverage's apply for a grill which is used in commercial applications.

EXCEPTIONS

There is no written or implied performance warranty on Pit Boss® grills, as the manufacturer has no control over the installation, operation, cleaning, maintenance or the type of fuel burned. This warranty will not apply nor will Dansons assume responsibility if your appliance has not been installed, operated, cleaned and maintained in strict accordance with this owner's manual. Any use of fuel not outlined in this manual may void the warranty. The warranty does not cover damage or breakage due to misuse, improper handling or modifications.

Neither Dansons, or authorized Pit Boss® dealer, accepts responsibility, legal or otherwise, for the incidental or consequential damage to the property or persons resulting from the use of this product. Whether a claim is made against Dansons based on the breach of this warranty or any other type of warranty expressed or implied by law, the manufacturer shall in no event be liable

for any special, indirect, consequential or other damages of any nature whatsoever in excess of the original purchase of this product. All warranties by manufacturer are set forth herein and no claim shall be made against manufacturer on any warranty or representation.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations of implied warranties, so the limitations or exclusions set forth in this limited warranty may not apply to you. This limited warranty gives you specific legal rights and you may have other rights, which vary from state to state.

ORDERING REPLACEMENT PARTS

To order replacement parts, please contact your local Pit Boss® dealer or visit our online store at: www.pitboss-grills.com

CUSTOMER CARE

If you have any questions or problems, contact Customer Care.

www.pitboss-grills.com

USA: (480) 923-9630 | Canada: 1-877-942-2246

PROCEDURE FOR WARRANTY SERVICE

Contact your nearest Pit Boss® dealer for repair or replacement parts. Danson's requires proof of purchase to establish a warranty claim; therefore, retain your original sales receipt or invoice for future reference. Record data in the space below as the safety rating label may become worn or illegible.

_____	_____
MODEL	SERIAL NUMBER
_____	_____
DATE OF PURCHASE	AUTHORIZED DEALER