



**COMMERCIAL SOUND ENCLOSURE
BLENDER MANUAL**



VARIABLE SPEED

29B-011(48OZ)

**PROGRAMMABLE
DIGITAL CONTROLS**

29B-012(48OZ)

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS

Read all instructions carefully before using your blender. Following these instructions will help prevent injuries and damage to the machine and will ensure that you have the best possible experience with your new blender.

AVOID CONTACT WITH MOVING PARTS

- ALWAYS keep fingers, hands, hair and clothing away from all moving parts.
- ALWAYS keep all utensils away from the drive socket and blender jar blades during operation as utensils may damage blades or the blender jar.
- NEVER put hands into the blender jar or add substances by hand when the blender jar is on the motor base.
- NEVER touch the blade with your fingers whether it is on or off the motor base.
- NEVER place jar into drive socket if blender motor is operating.
- DO NOT rock or remove the blender jar during operation.
- These precautions will prevent personal injury and/or damage to the blender.

NEVER OPERATE THE BLENDER IF IT APPEARS DAMAGED

If the blender malfunctions, call your service agent first. If it is dropped or damaged in any way, return the blender to a service agent immediately for examination, repair, electrical or mechanical adjustment, or possible replacement.

NEVER OPERATE BLENDER IN LIQUID

To protect against the risk of electrical shock do not put the motor base in water or other liquid. Do not use the blender outdoors where it is subject to precipitation.

NEVER PUT NON-FOOD ITEMS INTO JAR

Utensils, rocks, and glass are dangerous if placed in jar. Damage caused by such foreign objects will void the warranty.

NEVER OPERATE THE BLENDER WITHOUT THE LID IN PLACE

NEVER OPERATE THE BLENDER USING ATTACHMENTS NOT

The use of any unauthorized attachments may cause fire, electric shock, and/or injury and will void the warranty.

BLENDER JAR MUST BE PROPERLY IN PLACE WHILE

APPLIANCE IS OPERATING

USE CAUTION WHEN BLENDING HOT LIQUIDS

Your Commercial series blender may have a vented lid that acts as a pressure relief to allow steam to escape. Be careful not to come in contact with any steam.

POWER CORD PRECAUTIONS

- NEVER operate with a damaged cord or plug. If the supply cord is damaged it must be replaced by the manufacturer or authorized service agent to avoid a hazard.
- DO NOT permit the cord to hang over the edge of the work surface.
- NEVER use an extension cord with the unit.
- Unplug the blender motor when not in use, before changing blender locations, or when cleaning.

NEVER ATTEMPT TO REPAIR THE POWER UNIT

TURN THE BLENDER OFF WHEN NOT IN USE

AVOID TOUCHING THE BLENDER DRIVE SOCKET OR JAR


SHAFT AFTER USE!

The blender drive socket and jar shaft may become very hot after blend cycles.


SAFETY

This appliance is not intended for use by persons (including children) with lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

NEVER OPERATE THE BLENDER WITH MORE THAN THE MARKED CAPACITY OF THE JAR

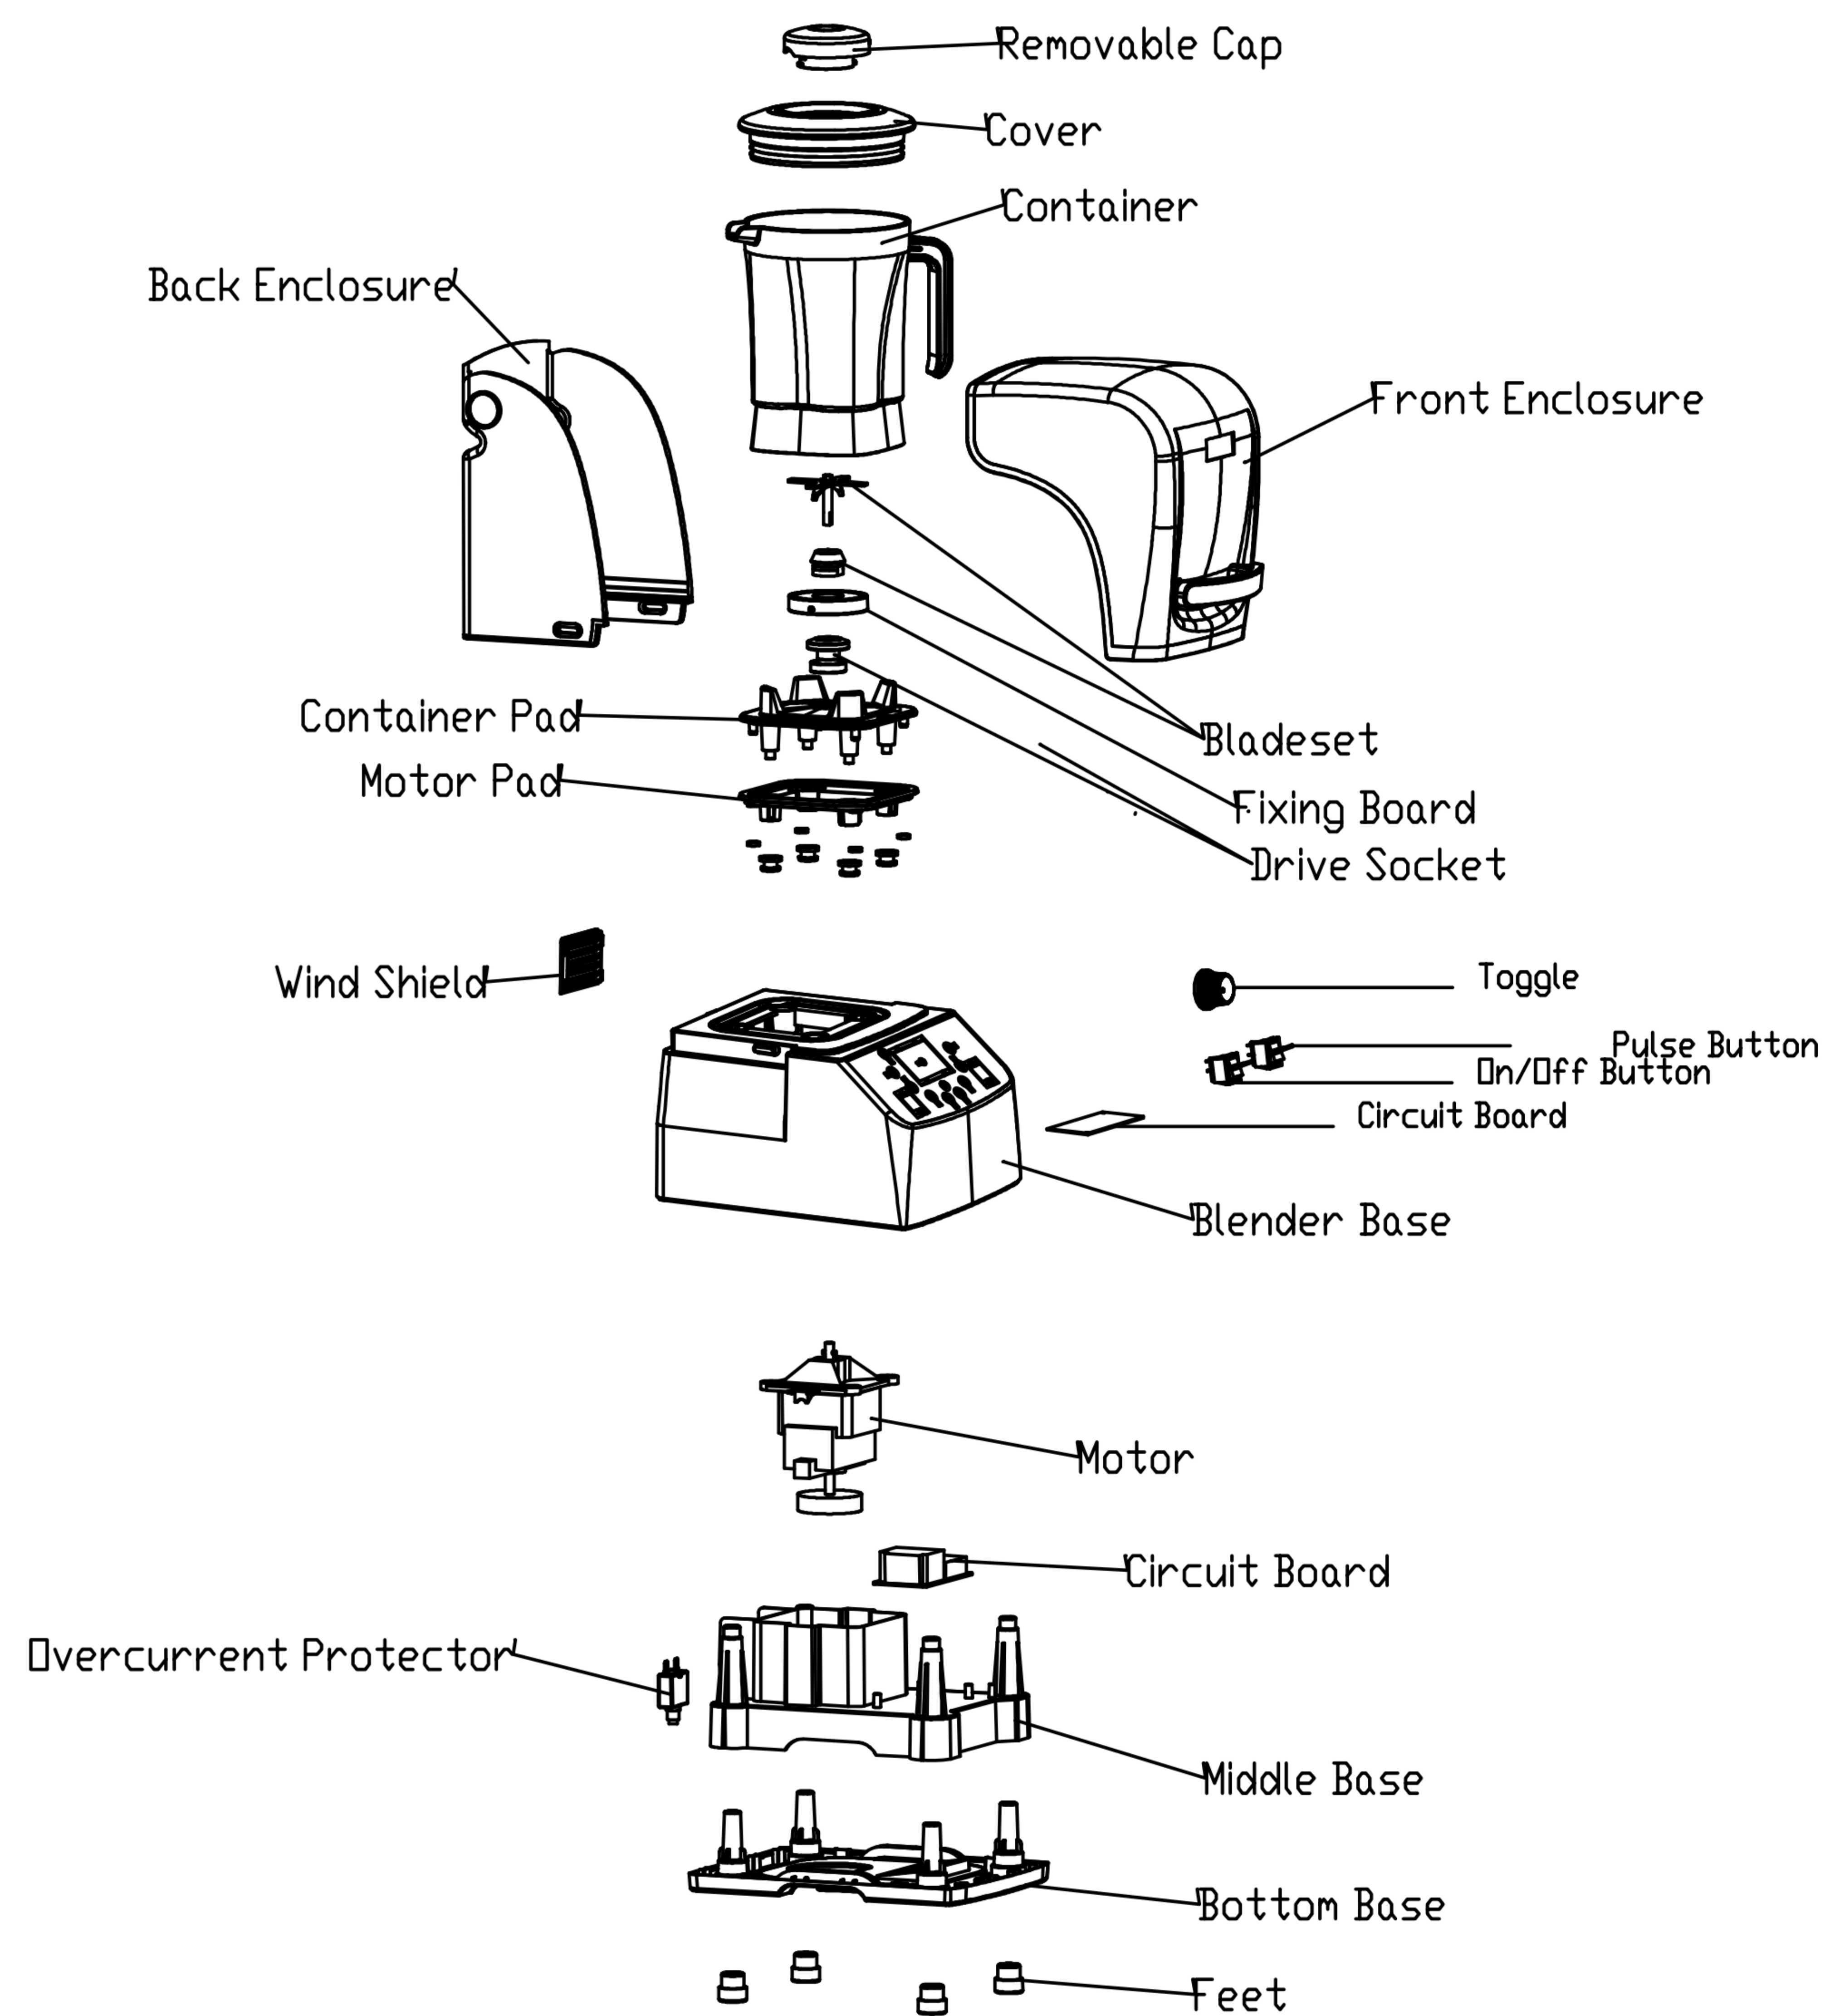

- Select a location that is near an electrical outlet. Also consider proximity to ingredients, and patrons as well as available counter space.
- Place the blender on the counter in a spot where the air intake vents on the sides and exhaust on the back of the blender are unobstructed.
- Ensure there is enough room above and around the unit to allow for unhampered movement of the sound enclosure (see Figure 1 for measurements).
- Plug the unit into an outlet with appropriate electrical protection

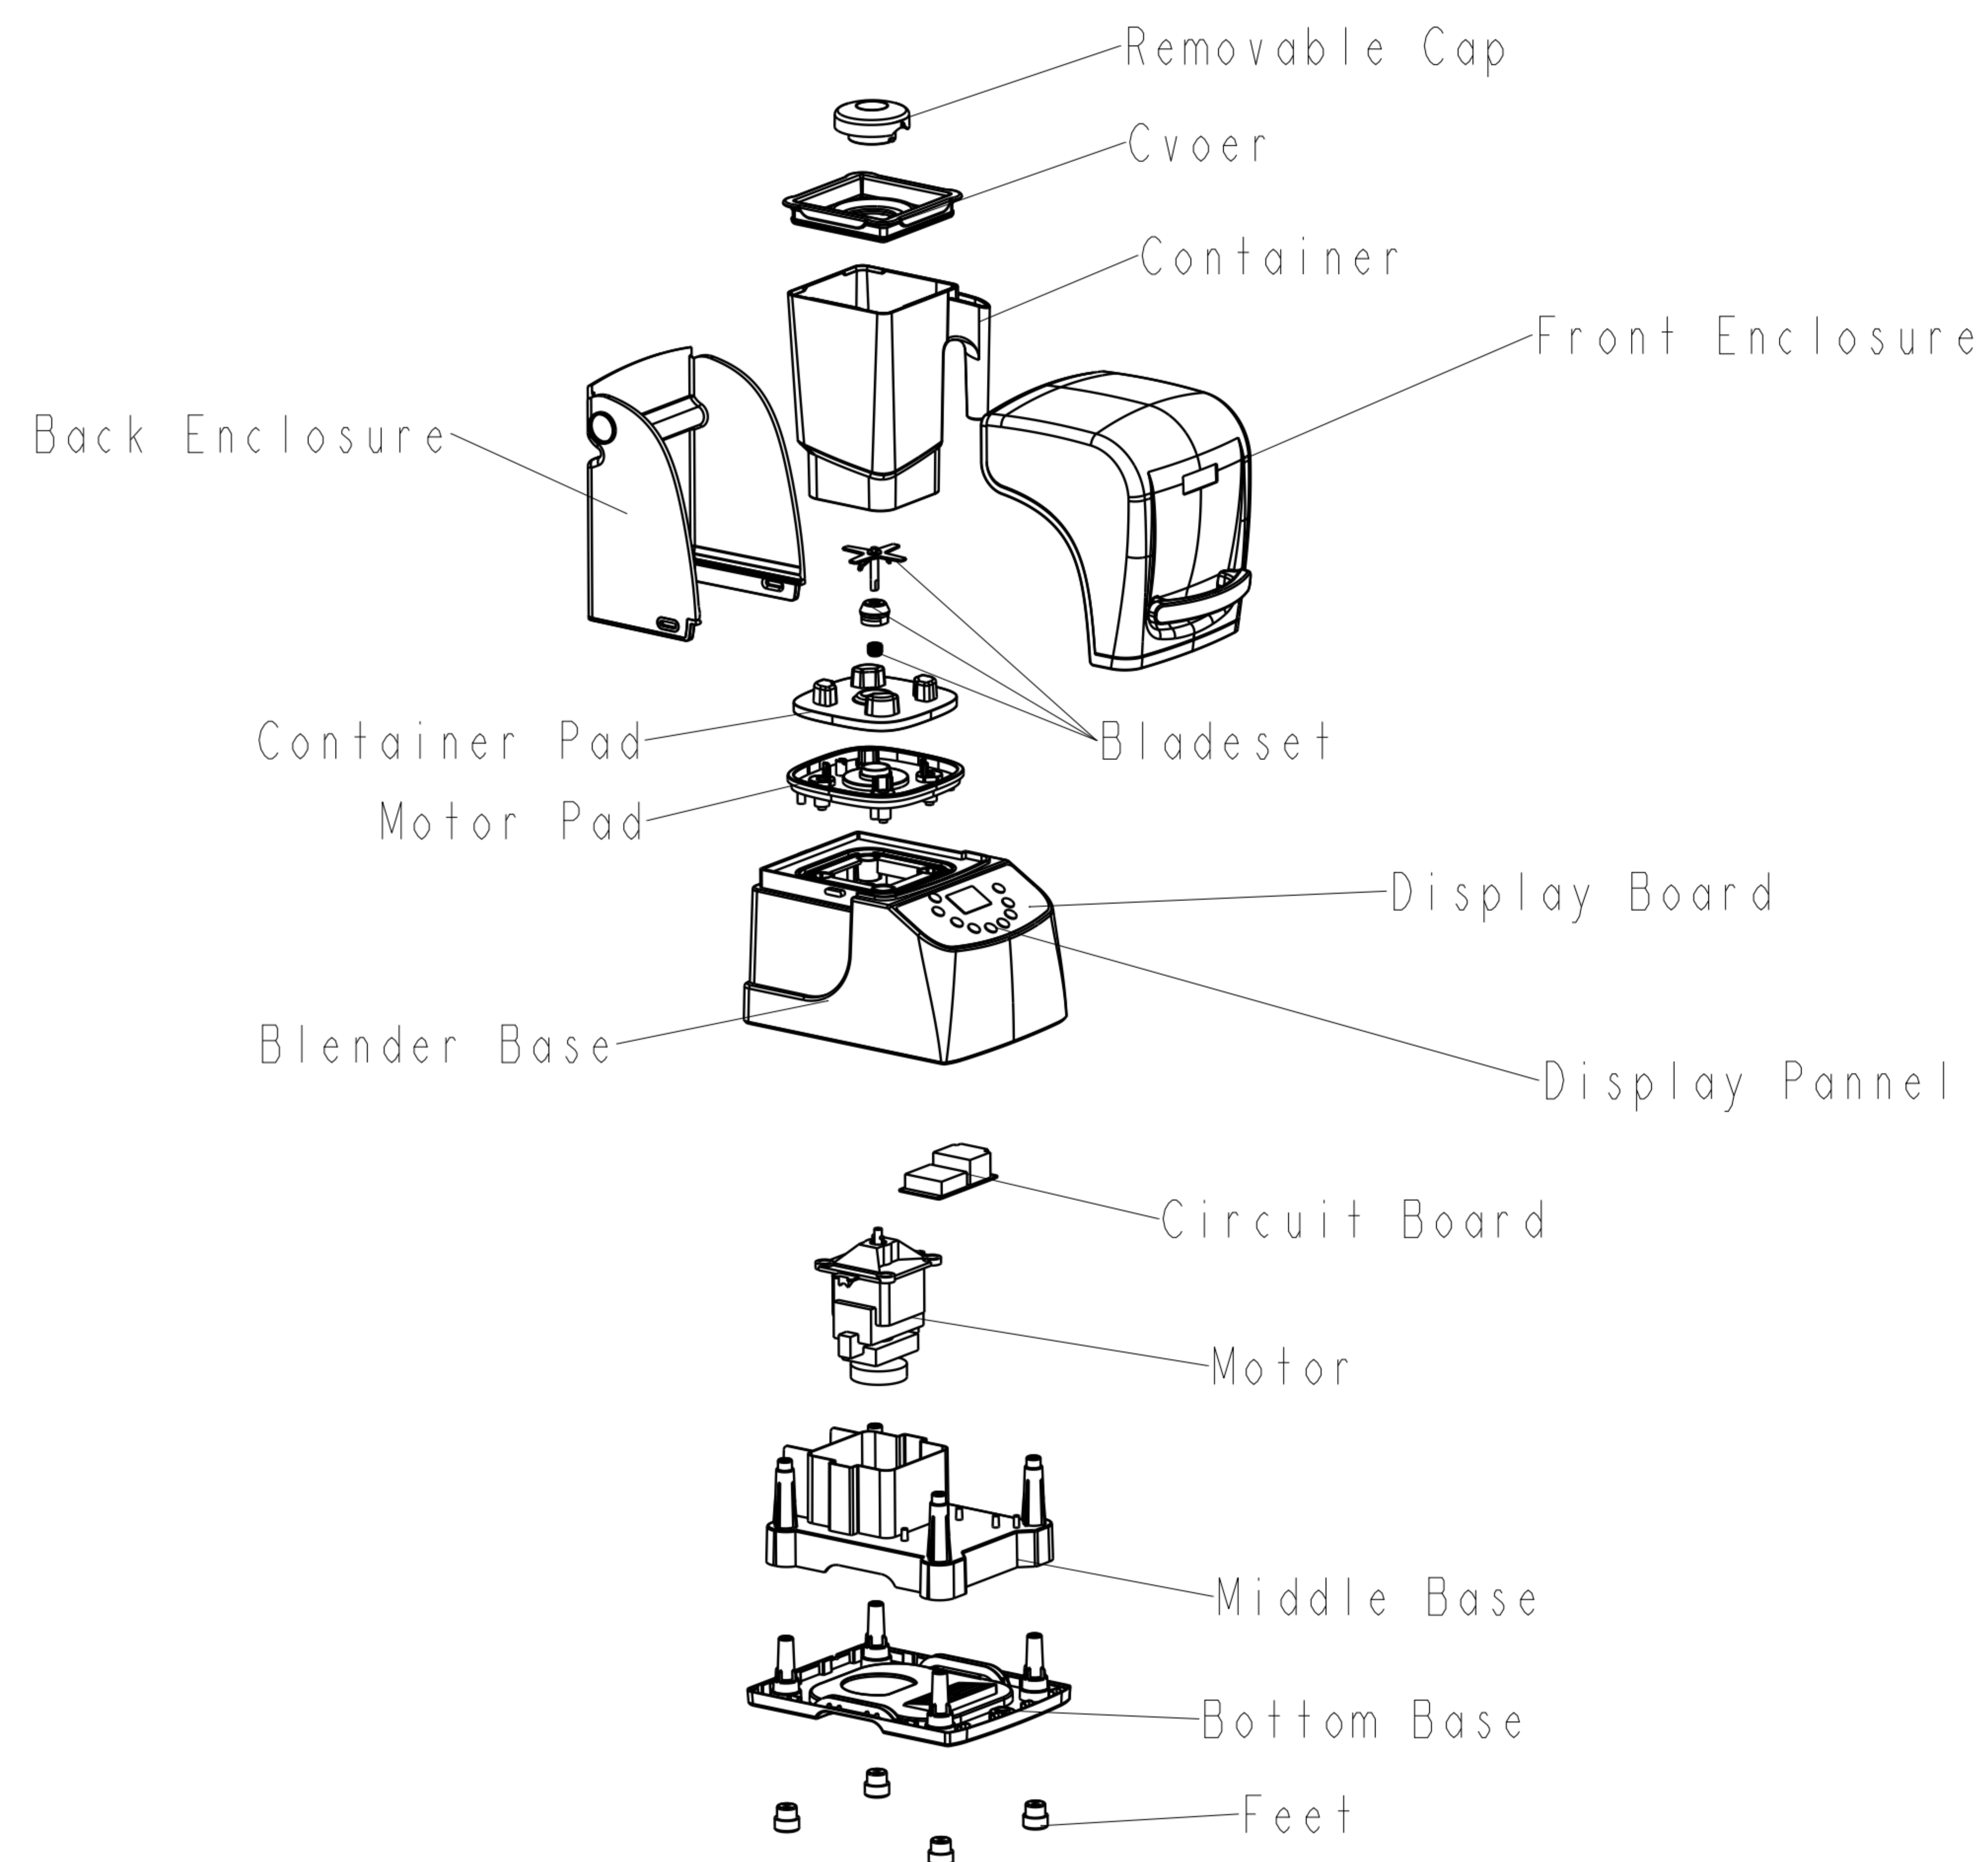

- Select a location that is near an electrical outlet. Also consider proximity to ingredients, and patrons as well as available counter space.
- Place the blender on the counter in a spot where the air intake vents on the sides and exhaust on the back of the blender are unobstructed.
- Ensure there is enough room above and around the unit to allow for unhampered movement of the sound enclosure (see Figure 1 for measurements).
- Plug the unit into an outlet with appropriate electrical protection



OPERATION INSTRUCTIONS

- 1 Press the power icon to turn on the blender.
- 2 Raise the sound enclosure lid.
- 3 Place the blender jar on the motor base, ensuring the jar is completely seated and the jar lid is secured.
- 4 Close the sound enclosure lid.

Speed Settings: This blender has adjustable speed settings using a dial knob. The dial knob can be used to adjust the speed from low to high during blending allowing for ultimate user control.

Pulse: This blender is also equipped with a pulse feature, which is engaged by holding down the “Pulse” button. The blender will run on high speed until the button is released. It will then return to the current speed setting.



OPERATION INSTRUCTIONS

- 1. [POWER] Start / Stop operation / DIY saving button
- 2. [MENU] Selection of 4 pre-programmed menu
- 3. [PULSE] Pulse operation
- 4. [TIMER] Increase / Decrease time
- 5. [SPEED] Increase / Decrease of speed level
- 6. [DIY] User’s own recipe program button
- 7.[DIY Setting] Press DIY button for 3 seconds, allows entering into program setting mode. Select the first stage’s time & speed and press power to save. Follow 2~3 stages accordingly.

User Guide

Commercial blender

1. MENU PROGRAM

Menu	Time
Ice crush	18'
Smoothie	40'
Juice	25'
Soup	90'

Automatically start in 3 seconds after selection

ICE CRUSH

SMOOTHIE

JUICE

SOUPS

MENU

User Guide

Commercial blender

2. DIY SETTING(You can set up a program based on your own recipe, Default program is ICE CRUSH & SMOOTHIE)

① DIY button (for example: DIY 1) for 3 seconds long press the display (screen) will have Y1 flicker.

② Speed (1 ~ 8 level), Time 5~90seconds) use the + / - button configuration

③ After first stage of the speed and time have to press Start/Stop button for save record. (Total have 3 stages)

④ After 3 stages saved then press DIY 1 button, the program is stored

Reset factory

①

②

Heavy Duty Professional Blender

51 88. 2.0

01

PULSE

PULSE for quick crush or jar clean

3. Reset to factory application

① First press MENU button keep 3~5 seconds then press START/STOP button at same time.

② The DIY1 & DIY2 will reset to factory program.

4. If normal timer & speed setting, after setting, press START/STOP then machine start work.

TROUBLE SHOOTING

Problem	Possible cause	Solution
Blender fails to run	No power connection	Plug in correct power outlet
	Motor overheat protector was tripped	Allow motor to cool down with power off in cool spot
Increased vibration and noise	The machine is not on a level surface	Place the machine on a level surface
	The blender jug has not been placed on the base completely	Make sure the blender jug placing securely and flat
	Container is too full	Decrease the ingredients
Leaking from lid	Water or liquid is too high	Decrease the water or liquid
	The lid is not fitted properly	Place the lid tightly on the blender jug

If the problem is still not resolved, please contact your local distributor for maintenance.

If the ingredients cannot be blended, please check first:

- Whether the water is enough
- Whether the blade is loose
- Whether the amount of ingredients are too large

P9

1 Customers shall fill out the product and user information carefully in accordance with the contents when purchasing the machine and make sure to ask for the proof of purchase.

2 Customers shall send the product to the place of purchase or the company offices or headquarters if the product requires maintenance.

3 Both the proof of purchase and the product warranty card shall be presented when maintenance is required.

4 The proof of purchase provides one year warranty from the purchase date (business site provides six months warranty, while cooling and soybean milk chain store provides 3 months warranty). Free maintenance is provided if a fault occurs to the product under normal use, but the expendable parts (various rubber products, bearings, tools, etc.) are excluded from the free maintenance.

5 There is no maintenance for the quality faults of the imitation products or the imitation product parts.

6 Free maintenance is not provided for the cases as follows although the product is within the warranty period:

(1) Fail to show the proof of purchase and the product warranty card, or the presented information is inconsistent with the actual condition or is altered;

(2) Improper use in accordance with the manual provided causes fault or damage;

(3) Unauthorized demolition or renovation causes fault or damage;

(4) Damage is caused due to force majeure such as natural disaster, earthquake, etc.;

7 The basic inspection fee of RMB 100 shall be considered and charged no matter the product will be repaired or not after the product is sent to the maintenance station for repair if the warranty period is exceeded.

8 When the product used for more than three years is repaired, the replacement parts are used for repair if there is a lack of parts and the repair will not be provided if there are no replacement parts. Please understand it.

9 During the repairing period of the product, the company will repair the product as soon as possible, and try to return it to customers at first time, but in the meantime, the company will not be responsible for any liability for compensation for the damaged interests of customers and the damage conditions that may occur.

10 The warranty card will not be supplemented if lost. Please keep it safe.

P10