

IMPORTANT SAFETY INSTRUCTIONS

 
When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using (this furnishing).

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions.
Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.
11. Do not mix old and new batteries.
12. Do not mix non rechargeable and rechargeable batteries.
13. **WARNING**- Risk of fire or explosion - only trained technicians should service or replace these batteries.
14. **WARNING**: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.
15. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
16. Recharge only with the charger specified by the manufacturer.
A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
17. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
18. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.
Shorting the battery terminals together may cause burns or a fire.
19. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
20. Do not use a battery pack or appliance that is damaged or modified.
Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
21. Do not expose a battery pack or appliance to fire or excessive temperature.
Exposure to fire or temperature above 130°C may cause explosion.
22. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
23. Have servicing performed by a qualified repair person using only identical replacement parts.
This will ensure that the safety of the product is maintained.
24. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
25. Do not exceed 0-30°C ambient temperature range for appliance and battery use, storage and charging system during charging.
26. Commercial use only.
27. **WARNING**: Risk of Injury. This surface is not designed for any type of load. Do not put any objects on this surface.
28. **WARNING**-Risk of fire or explosion-only trained technicians should service or replace these batteries.
29. For use only with XSG-2401500HUS adapter.
- 30.

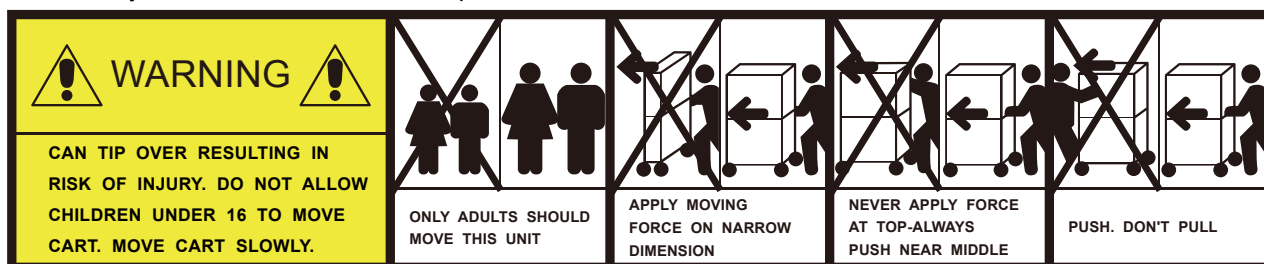


SAVE THESE INSTRUCTIONS

ASSEMBLY INSTRUCTIONS


COMPONENTS

- | | |
|------------------------------------|--|
| 1. Box | 12. Charging plug 1.5A |
| 2. Front and rear tray slides X2 | 13. Power socket |
| 3. Side shelf | 14. Direction switch |
| 4. Folding bracket X6 | 15. Battery pack |
| 5. Handle | 16. Cross groove flat head screw M5X15 X12 |
| 6. Acrylic sneeze guard | 17. Cross groove flat head screw M6X20 X12 |
| 7. Acrylic sneeze guard bracket X2 | 18. Cross groove flat head screw M4X15 X4 |
| 8. Arbeitsgangmotor X4 | 19. External hexagon screw M8X20 X16 |
| 9. Regulating unit X4 | 20. Anti slip hexagonal nut M8 X16 |
| 10. With brake caster X2 | 21. Anti slip hexagonal nut M6 X8 |
| 11. No brake caster X2 | |

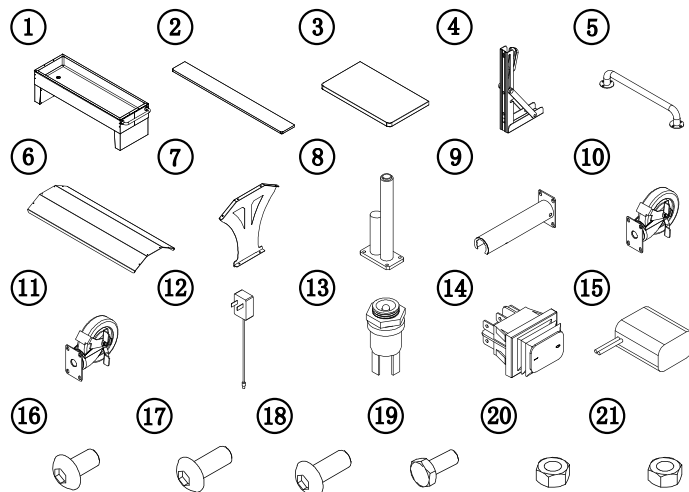 


Be sure to identify and confirm you have received all parts before assembly.

 
- ① Install the casters
use M8X20 and M8.

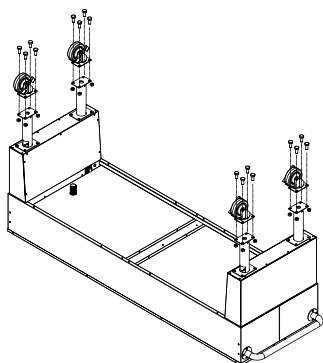

 
- ② Install the front and
rear tray slides use M5X15.

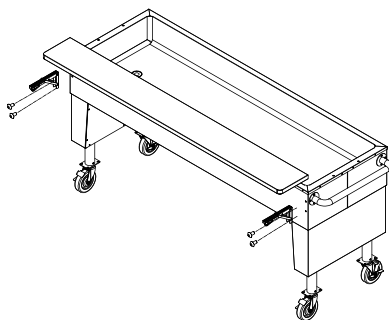

- ③ Install the side
shelf use M5X15.

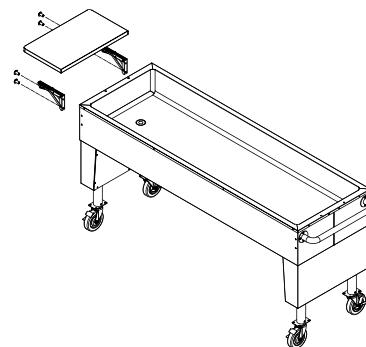 

 - ④ Install acrylic sneeze
guard use M6X20 and M6.

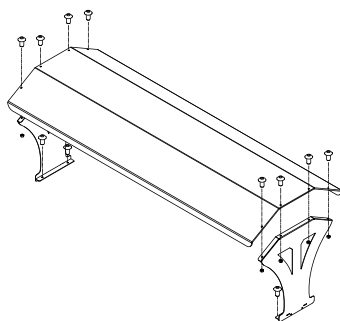

- ⑤ Install acrylic sneeze
guard bracket use M4X15.

