



Replacement blower motor kit (Part # RPC190-MTR)

Contains: (1) motor, (1) wire nut, (1) spade connector and instructions

Instructions

- Remove blower assembly from the cabinet.
- With a 3/32 allen key, loosen the set screw on wheel hub.
- On the end opposite the motor, remove the (5) philips pan head sheet metal screws. Then remove the housing end cap.
- Slide the blower wheel off the motor shaft.
- On the motor end cap, remove the (4) phillips pan head screws that hold the motor in place.
- Install the wheel and end cap. Tighten set screw on wheel hub.
- Re-install the blower and re-apply the silicone seal.

