




Your Solutions Partner


Recessed Hot Frost

Quick Reference Users Guide

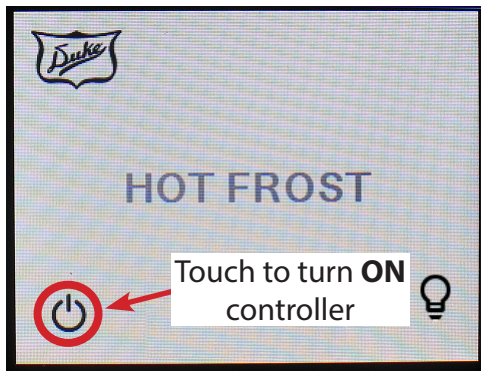

Power Up Screen


Unit will start cooling or heating based on last use.

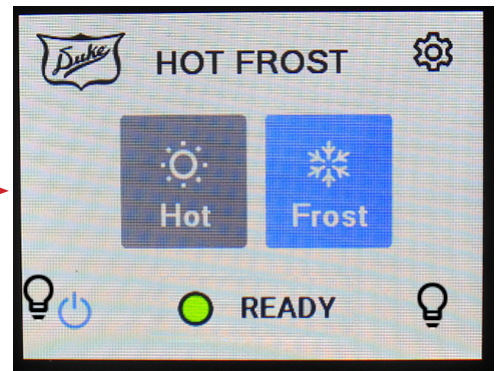

Select Mode
Hot, Frost



Select desired level of heating

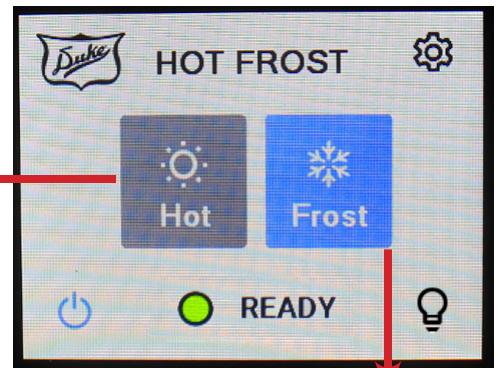


Unit will start cooling.
To turn on lights press the light icon

Unit will start heating.

Lights OFF

 
Lights ON



Preheat displayed during heating



 Indicates unit is ready




Cooling displayed during cooling


CAUTION: Please read these instructions completely before attempting to install, operate or service this equipment.

CHANGING SETTINGS


1 Select the **settings icon**.

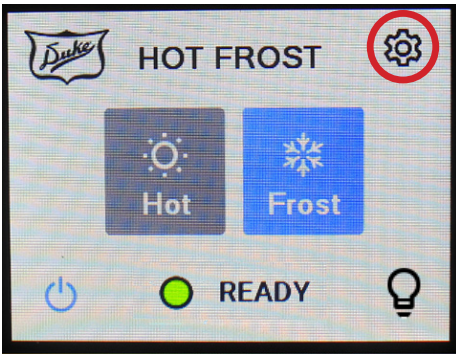


2 Select **Tools**.

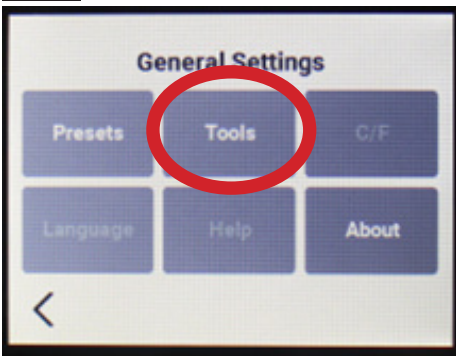


3 Select **Admin**

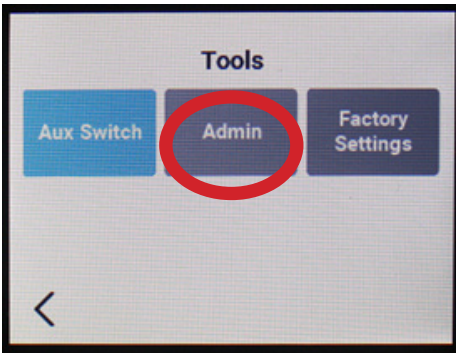


4 Enter pin code 0654

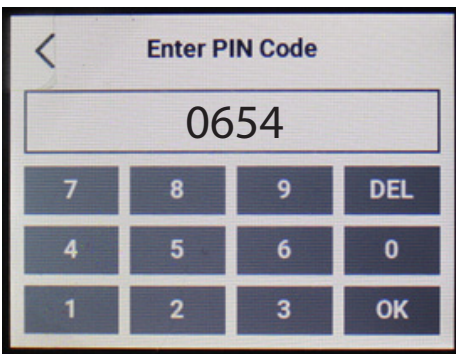


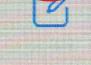
5 By default Presets will be "Locked" Slide the toggle to the unlock position and select the check mark.

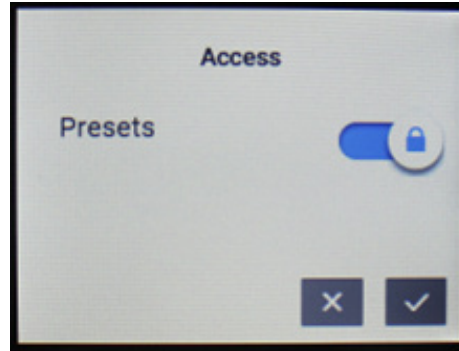

6 Now select Presets.

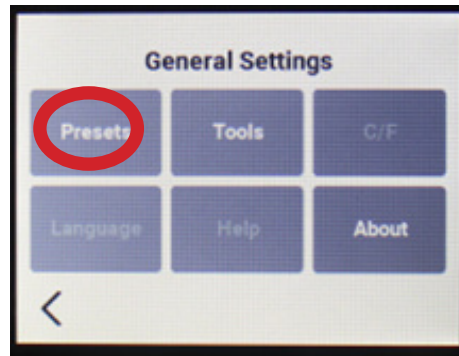


7 The 2 current presets will be displayed. Low and Medium. Select the edit icon next to the preset to be changed in the Actions column


Temperature Settings			
Preset	Temp	Status	Actions
Low	140 °F	✓	
Med	160 °F	✓	

Note: Set points may differ depending on unit.

8 Use the Plus and Minus buttons to modify the Temperature. The temperature will decrease or increase by 1. When done select the **CHECK** button to save or the **X** to cancel.

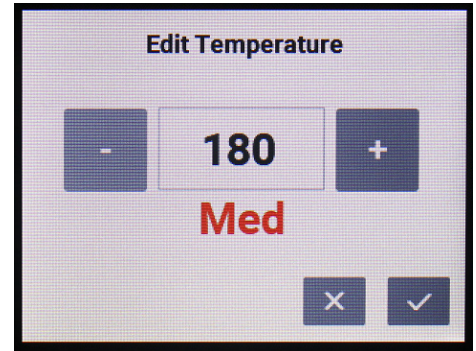

9 Return to the Access screen and lock the presets.

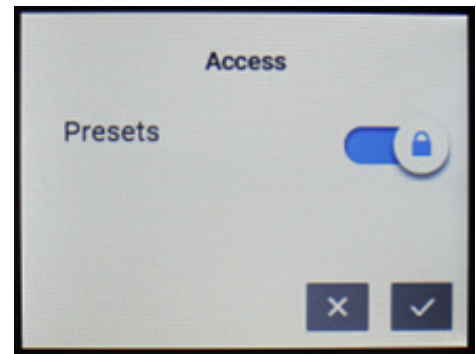

10 Return to the main screen. The new setpoint will now be used for the appropriate runtime screen.

