


# KitchenAid®

---

## Coffee Grinder KCG8433



# PARTS AND FEATURES

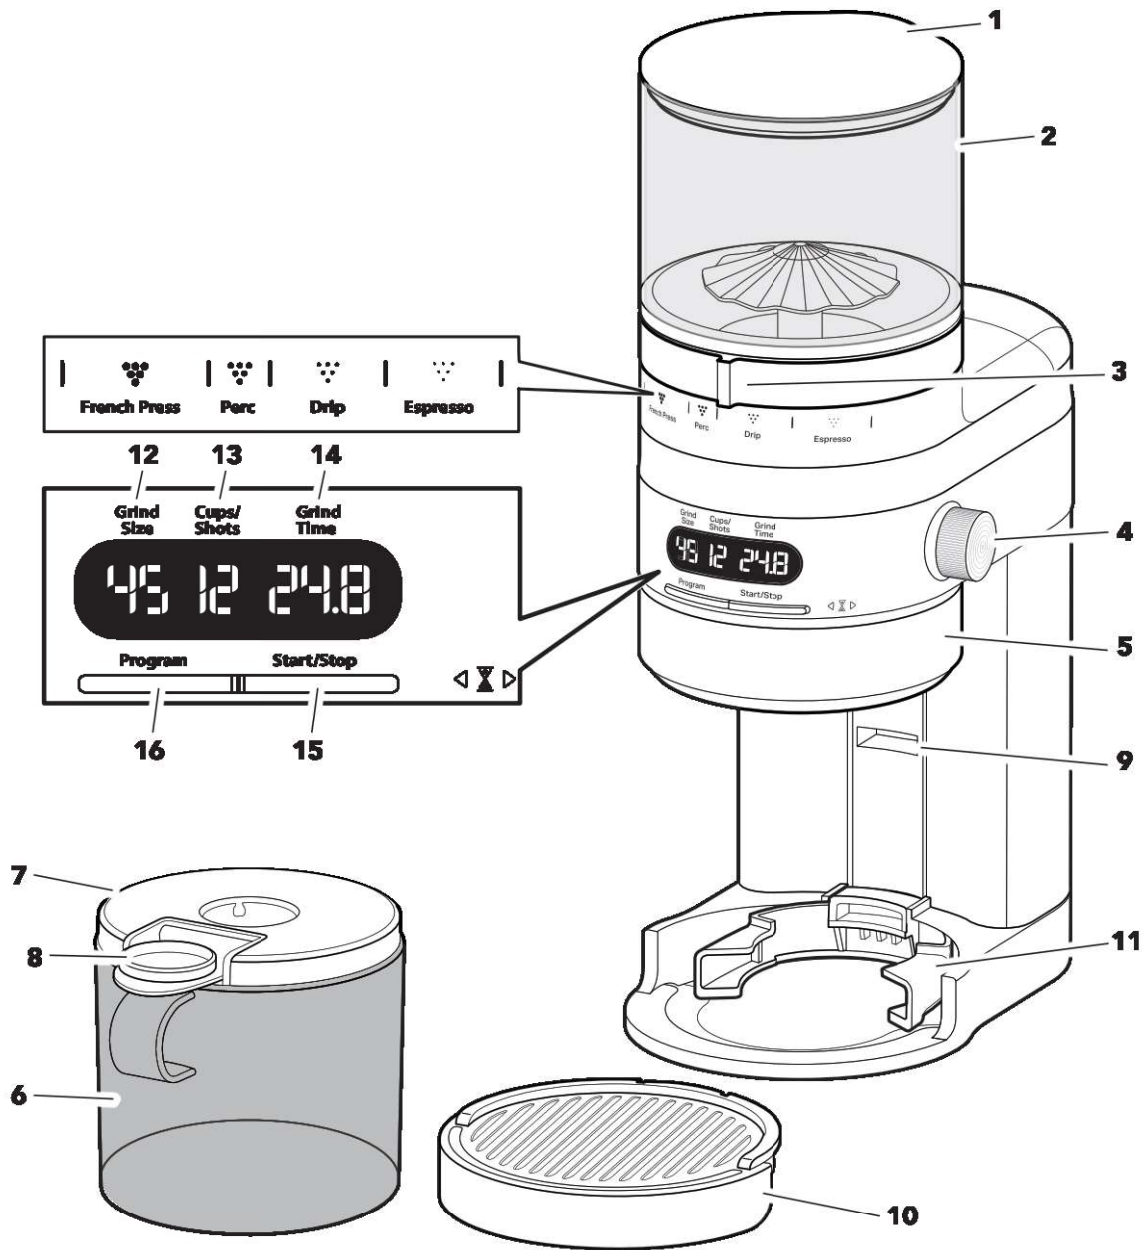

**NOTE:** The Top hopper holds a maximum of 10 oz (283 g) of coffee beans.\*

- |                               |                                    |
|-------------------------------|------------------------------------|
| <b>1</b> Top hopper lid       | <b>9</b> Portafilter holder guide  |
| <b>2</b> Top hopper           | <b>10</b> Grounds catcher tray     |
| <b>3</b> Grind size knob      | <b>11</b> Portafilter holder       |
| <b>4</b> Dose selection knob  | <b>12</b> Grind size indicator     |
| <b>5</b> Time adjustment knob | <b>13</b> Dose selection indicator |
| <b>6</b> Bottom hopper        | <b>14</b> Grind time indicator     |
| <b>7</b> Bottom hopper lid    | <b>15</b> Start/Stop button        |
| <b>8</b> Rubber stopper       | <b>16</b> Program button           |

\*Capacity may vary depending on coffee type and roast.

## PRODUCT SAFETY

### **Your safety and the safety of others are very important.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**! DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**! WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**Before using the electrical appliance, the following basic precautions should always be followed including the following:**

1. Read all instructions.
2. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
3. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
4. Check the Top hopper for the presence of any foreign objects before using.
5. Do not use outdoors.
6. To protect against risk of electrical shock, do not put the Coffee Grinder in water or other liquid.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
8. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
9. Avoid contacting moving parts.
10. Do not let cord hang over edge of table or counter.

## SAVE THESE INSTRUCTIONS

**This product is designed for household use only.**

# PRODUCT SAFETY

## ELECTRICAL REQUIREMENTS

---

**Voltage:** 120 VAC

**Frequency:** 60 Hz

**Wattage:** 150 Watts

**NOTE:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not modify the plug in any way.  
Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service person to install an outlet near the appliance.

The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## PRODUCT OVERVIEW

Your Burr Grinder has 70 unique grind size settings that are suitable for a range of brewing methods, from the finest setting for espresso to the coarsest setting for french press.

By adjusting the Dose selection knob, you can choose from 1 to 2 shots of espresso or 1 to 12 cups of coffee.

## COFFEE GRIND SETTING CHART

---

Coffee Type	French Press	Perc (Percolation)	Drip coffee	Espresso
Grind Size	Coarse	Medium Coarse	Medium	Fine
Dose Selection	1 - 12 cups	1 - 12 cups	1 - 12 cups	1-2 shots
Use setting with	Bottom hopper	Bottom hopper	Bottom hopper	Portafilter holder