



Project Name: _____

Item #: _____

Model #: _____

SC STORAGE CABINET INSTALLATION GUIDE

For Design and Installation Assistance
Call: 800-221-5644
info@imcteddy.com

50 Ranick Drive East • Amityville, NY 11701
(P) 800-221-5644 • (F) 631-789-8881

www.imcteddy.com

INTRODUCTION

Installing the IMC Teddy Storage Cabinet is a straightforward procedure that can be accomplished with normal construction materials and techniques. Installation procedures may vary due to field conditions and state regulations. Please note that the following instructions are recommendations only. The installer is responsible for proper setting and making sure the appropriate codes are followed. Please contact the IMC Teddy Engineering Department (800-221-5644) prior to considering retrofit installations. Click here for a video on installing your shelves inside of an IMC base cabinet: <https://bit.ly/3hrtsxB>

Please read the attached information carefully, as much of the information provided is reflecting proven installation techniques used in previous installations.

Parts Included

- SC Storage Cabinet
- Shelf Support Clips (10)
- S/S Shelves (5)

Tools/Materials Needed

- Set of 2" Screws
- Drill with $\frac{3}{32}$ " Bit

Step 1:

Position storage cabinet flat against wall.

Make sure cabinet is on even ground & not wobbly.

Note: Storage cabinet must be installed square & level. Use shims behind cabinet if necessary.

SC Storage Cabinet




Shown w/ Sloped Top & Hinged Glass Doors w/ Lock

Shelf Support Clips



S/S Shelves

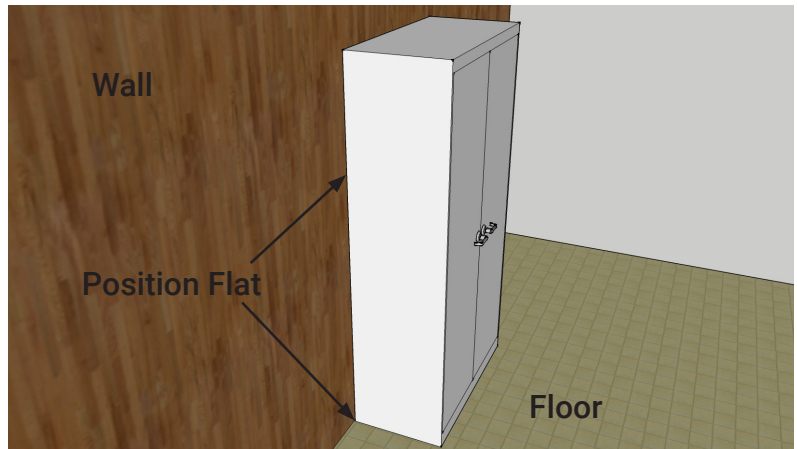


Step 2:

Drill 2-3 screws through the back of the storage cabinet (lower-middle area) to firmly secure to the wall.

Note: If cabinet length is larger than 48", use 4 screws to secure to wall.



Unit must be secured firmly to the wall during installation for best use & to avoid tipping over.

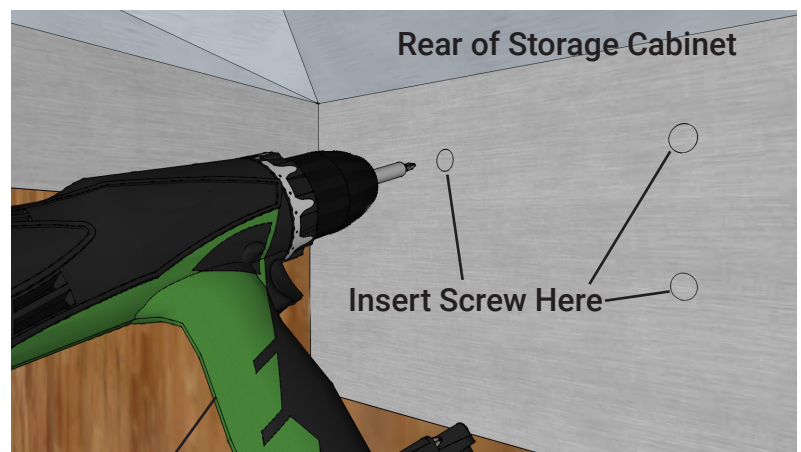


Drill

Step 3:

Mount shelf support clips at desired height/spacing & install shelves

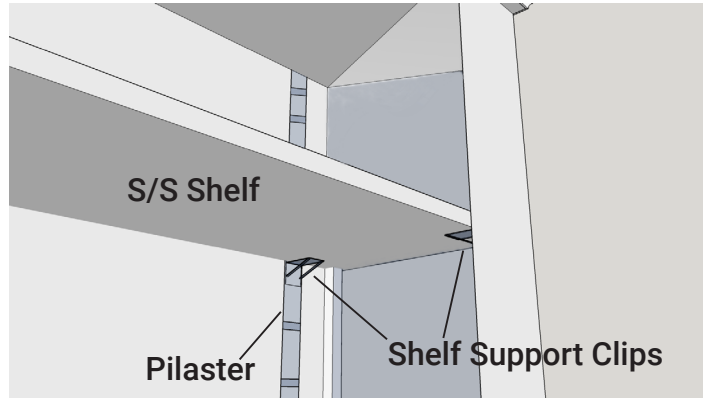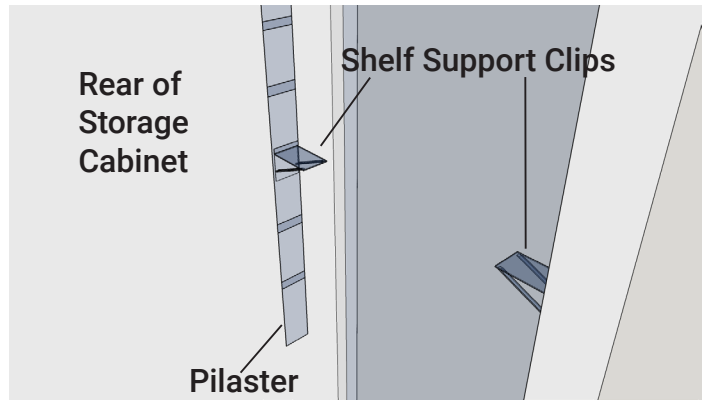

THESE INSTRUCTIONS APPLY TO OUR OTHER STORAGE CABINET MODELS BELOW:

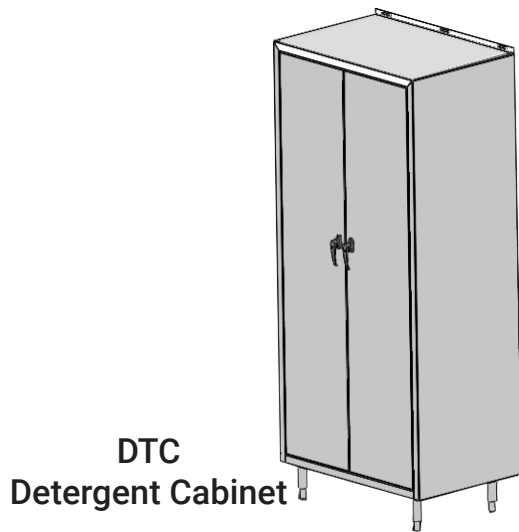

*Provided mounting tabs to secure to wall. Shelves are welded in place/not removable.

Warranty:

Product is guaranteed against defect in workmanship and material for a period of one year from date of shipment, provided such defects are do not result from abuse, unreasonable usage or other conditions beyond IMC's control. IMC's liability shall not exceed the cost of material furnished.

Easy Cleaning Instructions:

Rinsing is the most important part of care. Stainless steel will retain its original bright appearance if the product is rinsed thoroughly after each use. "Thorough" rinsing can be done by running the water throughout the product for a few minutes after each use. Typically, a rinse and towel drying after each use takes care of most everyday cleanups. For everyday cleaning we recommend using Stainless Steel Cleaners + Polishers. The non-abrasive formula is safe and effective for day to day cleaning. Your product will shine like new!

Recommendations for Proper Maintenance:

Use only a mild liquid dish-washing detergent with a soft sponge to clean and then thoroughly rinse the product. Rinse thoroughly after each use. "Thorough" rinsing can be done by running water for a few minutes and rubbing the cleaned area with a sponge.

Towel dry after each use to prevent mineral deposits from building up on the surface of the product.

- Do Not** allow liquid soap or other household cleansers to dry on the surface. Most brands contain chemical additives which will affect the original finish.

- Do Not** use solutions of chlorine bleach and water. Chlorides, which are found in most soaps, detergents, bleaches, and cleansers, are very aggressive to stainless steel. If left on the surface too long they can cause surface pitting.

- Do Not** use a steel wool pad to clean. Steel wool pads have a tendency to break apart and small particles of steel can become embedded in the surface of the product. The steel particles will rust and will give the appearance that the product itself is rusting.

- Do Not** use abrasive cleansers or abrasive pads as it will scratch the surface.

- Do Not** leave wet sponges, cloths, or cleaning pads on the product. This can lead to surface rust. Following these recommendations for the care and cleaning of your stainless steel product will insure that it will provide you with many years of service.

Chlorides:

Today, chlorides are found in most all soap, detergents, bleaches and cleansers; chlorides can be oppressive to stainless steel. However, chlorides are very water soluble. Therefore, THOROUGH RINSING of your product after each use to remove any chloride residue and a weekly scouring is all that is required to keep your product looking bright and shiny.

Water Quality:

The quality of your water can affect your product's appearance. If your water has a high iron content, a brown surface stain can form on the product giving the appearance of rust. Additionally, in areas with a high concentration of minerals, or with over-softened water, a white film may develop on the product. To combat these problems, we suggest that the product be towel dried after use.

Discoloration, Rust and Possible Pitting:

Wet sponges, cloths, cleaning pads and rubber mats left on the product can lead to discoloration. Steel wool pads should never be used to clean your product as they leave small iron particles in the grain lines which rust and can damage the product. Continued usage in this manner may eventually lead to the product itself rusting and pitting.

Liquid Soap:

Do not allow concentrated liquid detergent to dry on your product. Most brands contain chemical additives which will affect the original finish.

Spotting:

The quality of your water can affect your product's appearance. In areas with hard water, a brown surface stain can form on the product giving the appearance of rust. This also occurs in water with high iron content. Additionally, in areas with a high concentration of minerals, or with over-softened water, a white film may develop on the product. To combat this problem, we suggest that the product be towel dried after use.

Foods:

Heavy salt concentration or foods containing high levels of salt should not be allowed to dry onto the surface. Rinse your product thoroughly after use.

For more in-depth maintenance & care guidelines, visit these resources:

[IMC/Teddy Tips](#)

[NAFEM Tips](#)